



Perkins Electro-Acoustic Research Lab, Inc.

Web: <http://www.pearl-hifi.com>

E-mail: custserv@pearl-hifi.com

86008, 2106 33 Ave. SW, Calgary, AB; CAN T2T 1Z6

Ph: +. 1. 403. 244. 4434 Fx: +. 1. 403. 245. 4456



Engineering and Intuition Serving the Soul of Music

Please note that the links in the PEARL logotype above are “live” and can be used to direct your web browser to our site or to open an e-mail message window addressed to ourselves.

To view our item listings on eBay, [click here](#).

To see the feedback we have left for our customers, [click here](#).

This document has been prepared as a public service . Any and all trademarks and logotypes used herein are the property of their owners.

It is our intent to provide this document in accordance with the stipulations with respect to “fair use” as delineated in Copyrights - Chapter 1: Subject Matter and Scope of Copyright; Sec. 107. Limitations on exclusive rights: Fair Use.

Public access to copy of this document is provided on the website of Cornell Law School at <http://www4.law.cornell.edu/uscode/17/107.html> and is here reproduced below:

Sec. 107. - Limitations on exclusive rights: Fair Use


Notwithstanding the provisions of sections 106 and 106A, the fair use of a copyrighted work, including such use by reproduction in copies or phono records or by any other means specified by that section, for purposes such as criticism, comment, news reporting, teaching (including multiple copies for classroom use), scholarship, or research, is not an infringement of copyright. In determining whether the use made of a work in any particular case is a fair use the factors to be considered shall include:

- 1 - the purpose and character of the use, including whether such use is of a commercial nature or is for nonprofit educational purposes;
- 2 - the nature of the copyrighted work;
- 3 - the amount and substantiality of the portion used in relation to the copyrighted work as a whole; and
- 4 - the effect of the use upon the potential market for or value of the copyrighted work.

The fact that a work is unpublished shall not itself bar a finding of fair use if such finding is made upon consideration of all the above factors

MODEL 188

4 MHz SWEEP/ FUNCTION GENERATOR

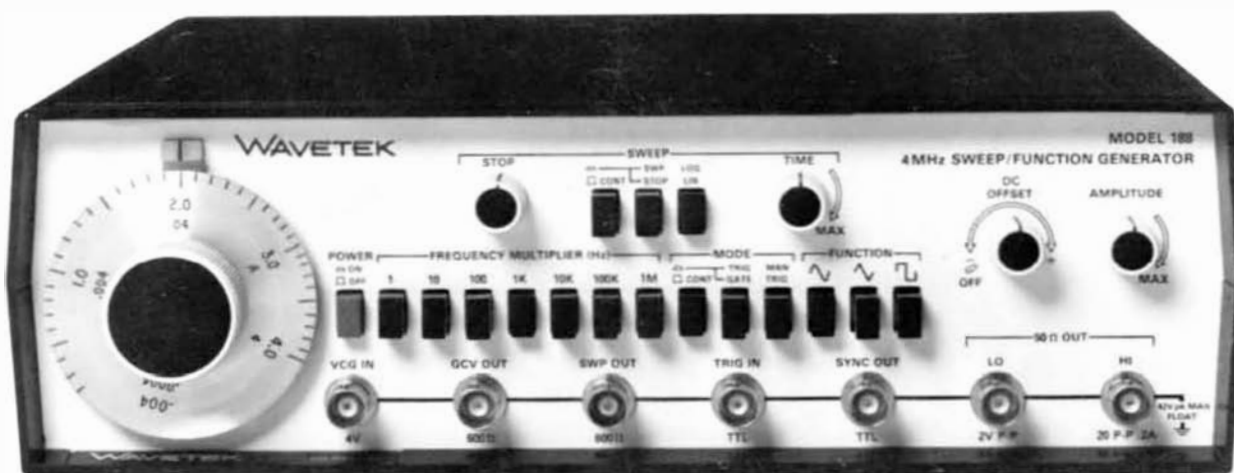

WAVETEK

INSTRUCTION MANUAL
MODEL 188
**4 MHz SWEEP/
FUNCTION GENERATOR**

© - 1980 - WAVETEK

THIS DOCUMENT CONTAINS INFORMATION PROPRIETARY TO WAVETEK AND IS SOLELY FOR INSTRUMENT OPERATION AND MAINTENANCE. THE INFORMATION IN THIS DOCUMENT MAY NOT BE DUPLICATED IN ANY MANNER WITHOUT THE PRIOR APPROVAL IN WRITING OF WAVETEK.

WAVETEK®
SAN DIEGO
9045 Balboa Ave., San Diego, CA 92123
P. O. Box 651, San Diego, Calif. 92112
Tel 714/279-2200 TWX 910-335-2007

Manual Revision: 7/80
Instrument Release: Original

WARRANTY

All Wavetek instruments are warranted against defects in material and workmanship for a period of one year after date of manufacture. Wavetek agrees to repair or replace any assembly or component (except batteries) found to be defective, under normal use, during this period. Wavetek's obligation under this warranty is limited solely to repairing any such instrument which in Wavetek's sole opinion proves to be defective within the scope of the warranty when returned to the factory or to an authorized service center. Transportation to the factory or service center is to be prepaid by purchaser. Shipment should not be made without prior authorization by Wavetek.

This warranty does not apply to any products repaired or altered by persons not authorized by Wavetek, or not in accordance with instructions furnished by Wavetek. If the instrument is defective as a result of misuse, improper repair, or abnormal conditions or operations, repairs will be billed at cost.

Wavetek assumes no responsibility for its product being used in a hazardous or dangerous manner either alone or in conjunction with other equipment. High voltage used in some instruments may be dangerous if misused. Special disclaimers apply to these instruments. Wavetek assumes no liability for secondary charges or consequential damages and, in any event, Wavetek's liability for breach of warranty under any contract or otherwise, shall not exceed the purchase price of the specific instrument shipped and against which a claim is made.

Any recommendations made by Wavetek for use of its products are based upon tests believed to be reliable, but Wavetek makes no warranty of the results to be obtained. This warranty is in lieu of all other warranties, expressed or implied, and no representative or person is authorized to represent or assume for Wavetek any liability in connection with the sale of our products other than set forth herein.

SAFETY

This instrument is wired for earth grounding via the facility power wiring. Do not bypass earth grounding with two wire extension cords, plug adapters, etc.

BEFORE PLUGGING IN the instrument, comply with installation instructions.

MAINTENANCE may require power on with the instrument covers removed. This should be done only by qualified personnel aware of the electrical hazards.

WARNING notes call attention to possible injury or death hazards in subsequent operations.

CAUTION notes call attention to possible equipment damage in subsequent operations.

CONTENTS

SECTION 1 GENERAL DESCRIPTION

1.1 THE MODEL 188.....	1-1
1.2 SPECIFICATIONS.....	1-1
1.2.1 Versatility.....	1-1
1.2.2 Frequency Precision.....	1-2
1.2.3 Amplitude Precision.....	1-2
1.2.4 Waveform Characteristics.....	1-2
1.2.5 General.....	1-2

SECTION 2 INSTALLATION

2.1 MECHANICAL INSTALLATION.....	2-1
2.2 ELECTRICAL INSTALLATION.....	2-1
2.2.1 Power Connection.....	2-1
2.2.2 Signal Connections.....	2-1
2.3 ELECTRICAL ACCEPTANCE CHECK.....	2-1
2.4 CHANGING THE OUTPUT IMPEDANCE.....	2-1

SECTION 3 OPERATION

3.1 CONTROLS AND CONNECTIONS.....	3-1
3.2 OPERATION.....	3-2
3.2.1 Signal Termination.....	3-2
3.2.2 Manual Function Generator Operation.....	3-3
3.2.3 Voltage Controlled Function Generator Operation.....	3-3
3.2.4 Sweep Generator Operation.....	3-4
3.2.5 Waveforms.....	3-5

SECTION 4 CIRCUIT DESCRIPTION

SECTION 5 ALIGNMENT

5.1 FACTORY REPAIR.....	5-1
5.2 REQUIRED TEST EQUIPMENT.....	5-1
5.3 REMOVING GENERATOR COVERS.....	5-1
5.4 ALIGNMENT.....	5-1

SECTION 6 TROUBLESHOOTING

6.1 FACTORY REPAIR.....	6-1
6.2 TROUBLESHOOTING TABLES.....	6-1
6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS.....	6-1
6.4 GENERAL INSTRUCTIONS.....	6-2

SECTION 7 PARTS AND SCHEMATICS

7.1 DRAWINGS.....	7-1
7.2 ORDERING PARTS.....	7-1
7.3 ADDENDA.....	7-1

1

SECTION 1

GENERAL DESCRIPTION

1.1 THE MODEL 188

The Wavetek Model 188, 4 MHz Sweep/Function Generator, is a precision source of sine, triangle and square waveforms plus dc voltage. All waveforms are front panel variable from 4 mHz to 4 MHz and can be internally or externally modulated. Frequencies are variable linearly or logarithmically within a frequency range. When used as a sweep generator, an internal ramp generator provides a recurring sweep over a 1000:1 (linear) frequency range or 10,000:1 (logarithmic) frequency range. Output can be continuous or the generator can be triggered or gated by an external signal or a front panel switch. Amplitude of the waveforms is variable from 10V peak-to-peak into 50 Ω down to 15 mV peak-to-peak. DC reference of the waveform can be offset positively or negatively.

The two selectable waveform outputs are a 20V peak-to-peak maximum and a 2V peak-to-peak maximum (20 dB down from 20 Vp-p); both may be varied over a 30 dB range. Auxiliary outputs are a TTL level sync, a 600 Ω sweep ramp and a 600 Ω generator control voltage signal whose level is proportional to the main generator frequency.

1.2 SPECIFICATIONS

1.2.1 Versatility

Waveforms

Sine $\sim$, triangle ∇ , square $\square$, TTL pulse $\square$ and dc.

Operational Modes

Continuous: Generator runs continuously at selected frequency.

Triggered: Generator is quiescent until triggered by external signal or manual trigger, then generates one complete waveform cycle at selected frequency.

Gated: As triggered mode, except output continues for duration of gate signal. Last waveform started is completed.

Sweep: An internal ramp generator will sweep the main generator from a lower, start frequency to a higher stop frequency, linearly (3 decades) or logarithmically (4 decades).

Sweep Stop: Frequency switches to high sweep limit. Used to set high frequency limit.

Frequency Range

0.004 Hz linear (0.0004 Hz log) to 4 MHz in 7 overlapping decade ranges:

$\times 1$	0.004 (0.0004) to 4 Hz
$\times 10$	0.04 (0.004) to 40 Hz
$\times 100$	0.4 (0.04) to 400 Hz
$\times 1K$	4 (0.4) to 4 kHz
$\times 10K$	40 (4) to 40 kHz
$\times 100K$	400 (40) to 400 kHz
$\times 1M$	4 (0.4) kHz to 4 MHz

Function Output

$\sim$, ∇ , $\square$ selectable and variable to 20 Vp-p (10 Vp-p into 50 Ω) HI output, and to 2 Vp-p (1 Vp-p into 50 Ω) LO output. Both outputs varied with a 30 dB vernier. Peak output current is 100 mA maximum (HI output) into 50 Ω (200 mA peak into a short circuit). Source impedance is 50 Ω .

DC Offset and DC Output

Waveform offset and dc output selectable and variable through HI and LO BNC outputs. DC output selectable by not selecting a waveform function. HI output is $\pm 10V$ max ($\pm 5V$ into 50 Ω) as offset or Vdc output. Signal-peak plus offset limited to $\pm 10V$ ($\pm 5V$ into 50 Ω). LO output is $\pm 1V$ max ($\pm 0.5V$ into 50 Ω) as is signal-peak plus offset limit. DC offset plus waveform attenuated proportionately at LO (-20 dB) output.

TTL Sync Output

TTL pulse (50% duty cycle) at generator frequency. Drives up to 20 TTL loads.

GCV — Generator Control Voltage

0 to 4.0V open circuit output from 600 Ω source impedance. Proportional to frequency of main generator. For use as a horizontal drive signal.

VCG — Voltage Controlled Generator

Up to 1000:1 frequency change (linear mode) or up to 10,000:1 change (logarithmic mode) with external 0 to ± 4 V signal. Upper and lower frequencies limited to maximum and minimum of selected range.

Slew Rate: 2% of range per μ s (linear); 0 to 100% of range in 20 ms (logarithmic).

Linearity: $\pm 0.5\%$ through $\times 100$ K range; $\pm 2\%$ on $\times 1$ M range.

Input Impedance: 2 k Ω .

Sweep

Main generator is frequency modulated by internal sweep generator. Main generator frequency repeatedly rises from frequency set by dial and range button to frequency set by sweep stop knob.

Sweep Mode: Linear (3 decades max) or logarithmic (4 decades max).

Sweep Rate: 30 ms to 1 min. (nominal) continuously adjustable.

Sweep Width: Up to 1:1000 (linear) or 1:10,000 (logarithmic) continuously adjustable.

Sweep Output

Ramp waveform output with 4V peak into open circuit. Source impedance 600 Ω . For use as a horizontal drive signal.

Trigger and Gate

Input: TTL compatible levels.

Pulse Width: 50 ns minimum.

Repetition Rate: 4 MHz maximum.

1.2.2 Frequency Precision

Dial Accuracy

$\pm 5\%$ of full scale.

Time Symmetry

Square wave variation from 0.2 to 4.0 on dial less than: $\pm 1\%$ to 100 kHz; $\pm 5\%$ to 4 MHz.

1.2.3 Amplitude Precision

Sine variation with frequency less than: ± 0.2 dB on all ranges through $\times 100$ K; ± 1.0 dB to 4 MHz.

1.2.4 Waveform Characteristics

Sine Distortion

Less than: 0.5% on $\times 1$ K and $\times 10$ K ranges; 1% on $\times 1$, $\times 10$, $\times 100$ and $\times 100$ K ranges. All harmonics 25 dB below fundamental on $\times 1$ M range.

Triangle Linearity

Greater than 99% to 200 kHz.

Square Wave Rise and Fall Time

At HI output, less than 50 ns for 10 V_{p-p} output into 50 Ω termination.

1.2.5 General

Environmental

Specifications apply at 25°C $\pm 5^\circ$ C. Instrument will operate from 0°C to 50°C ambient temperatures.

Dimensions

28.6 cm (11 $\frac{1}{4}$ in.) wide; 8.9 cm (3 $\frac{1}{2}$ in.) high; 26.7 (10 $\frac{1}{2}$ in.) deep.

Weight

2.7 kg (6 lb) net; 4.5 kg (10 lb) shipping.

Power

90 to 128V or 198 to 264V (specify); 48 to 66 Hz; less than 15 watts.

NOTE

All specifications apply for dial between 0.2 and 4.0; amplitude at 10 V_{p-p} from HI output into 50 Ω termination.

SECTION 2

INSTALLATION

2.1 MECHANICAL INSTALLATION

After unpacking the instrument, visually inspect all external parts for possible damage to connectors, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the unit. The shipping container and packing material should be saved in case reshipment is required.

2.2 ELECTRICAL INSTALLATION

2.2.1 Power Connection

WARNING

To preclude injury or death due to shock, the third wire earth ground must be continuous to the facility power outlet. Before connecting to the facility power outlet, examine extension cords, auto-transformers, etc., between the instrument and the facility power outlet for a continuous earth ground path. The earth ground path can be identified at the plug on the instrument power cord; of the three terminals, the earth ground terminal is the nonmatching shape, usually cylindrical.

CAUTION

To prevent damage to the instrument, check for proper match of line and instrument voltage and proper fuse type and rating.

NOTE

Unless otherwise specified at the time of purchase, this instrument was shipped from the factory for operation on a 90 to 128 Vac line supply and with a 1/4 amp slow blow fuse. Instruments configured for 180 to 256 Vac have a 1/8 amp slow blow fuse.

Select the appropriate fuse and 115 or 230 switch position at the rear panel when changing power sources.

2.2.2 Signal Connections

Use 3 foot RG58U 50 Ω shielded cables equipped with BNC connectors to distribute all input and output signals.

2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure is a general verification of generator operation. Should a malfunction be found, refer to the warranty in the front of this manual.

A two channel oscilloscope, four 3 foot 50 Ω coax cables with BNC connectors, a coax tee connector and an additional function generator are required for this procedure.

Preset the generator front panel controls as follows:

Control	Position
Dial	2.0
MODE	CONT (released)
FUNCTION	
DC OFFSET	OFF (ccw)
AMPLITUDE	MAX (cw)
FREQUENCY MULTIPLIER	$\times 1K$
SWEEP	CONT (released)

Set up the oscilloscope, Model 188 and external function generator as shown in figure 2-1 and perform the steps in table 2-1.

2.4 CHANGING THE OUTPUT IMPEDANCE

The output impedance is normally:

HI 10V p-p (50 Ω source) into 50 Ω .
LO 1V p-p (50 Ω source) into 50 Ω .

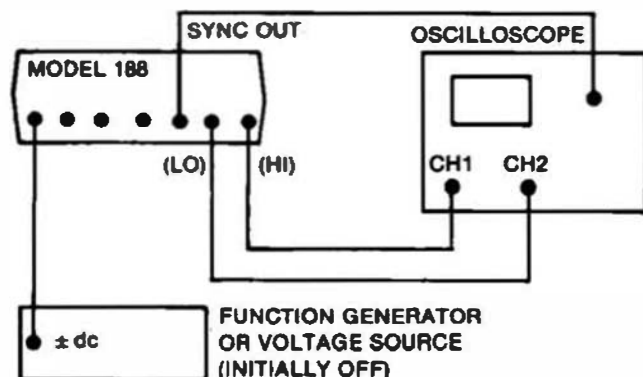


Figure 2-1. First Setup

Amplitude is normally variable over 30 dB for each output with a 50 dB amplitude range available by utilizing both outputs.

If simultaneous 600Ω and 50Ω output impedances are desired:

1. Change value of R148 from 499Ω to 604Ω.
2. Remove R149.

The result is:

HI 10V p-p (50Ω source) into 50Ω.
LO 10V p-p (600Ω source) into 600Ω.

Amplitude is variable over 30 dB. Square wave rise and fall time is less than 150 ns. Any value greater than 600Ω may also be substituted for the value of R148 for other output impedances.

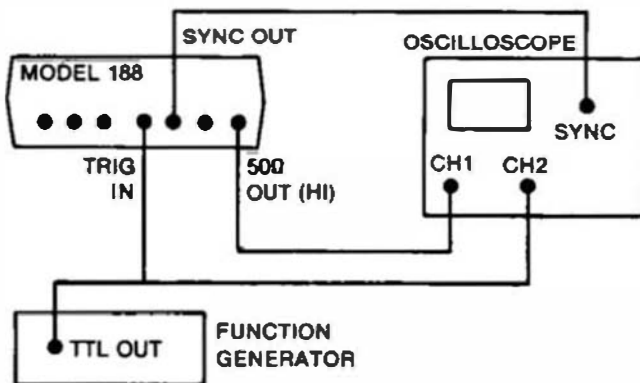
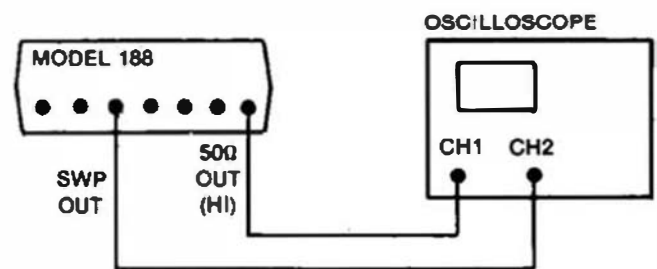
To increase the range of the variable amplitude control in a modified unit beyond 30 dB, decrease the value of R124 as necessary. Waveform quality relative to the standard unit is not guaranteed below -30 dB and above 20 kHz.

Table 2-1. Initial Checkout

Step	Control	Position/Operation	Observation
1	POWER	ON	±10V square wave on CH1 and ±1V on CH2. Return to CH1 only.
2	Dial	Rotate in both directions. Return to 2.0.	Rotation ccw increases frequency of $\square$; rotation cw decreases frequency.
3	FREQUENCY MULTIPLIER	Press each switch sequentially; return to ×1K.	Frequency increases in decade steps, left to right.
4	AMPLITUDE	Rotate ccw.	Amplitude decreases.
5	DC OFFSET	Rotate cw. Return to OFF.	Output immediately offset negative, then moves positive. OFF return it to original level.
6	AMPLITUDE	Rotate cw.	Square returns to original amplitude.
7	Function Generator or DC Voltage Source	Vary input dc voltage; then disconnect VCG IN input.	Frequency increases with positive voltage and decreases with negative voltage.
8	FUNCTION	Press $\sim$, $\square$, $\sim$.	Observe $\sim$, $\square$, $\sim$ waveforms.
9	MODE	Gate (CONT depressed, TRIG/GATE released).	A dc level near zero volts (except $\square$ function).
10	MANUAL TRIGGER	Press and hold.	Continuous $\sim$.

Table 2-1. Initial Checkout (Continued)

Step	Control	Position/Operation	Observation
<i>Set up trigger source as shown in figure 2-2. Set trigger source for 100 Hz TTL signal.</i>			
11	---	----	 gated on during positive portion of TTL signal on CH2.
12	TRIG/GATE	Trigger (depressed)	One  cycle per trigger cycle.
13	MODE	Main generator continuous (CONT released)	Setup connectors as shown in figure 2-3. Sync scope on channel 2 input.
14	Dial	Full cw	
15	SWEEP Controls	Linear sweep (CONT depressed, SWP/STOP depressed, LOG/LIN extended, STOP full cw, TIME centered)	Output varies from low frequency to high frequency
16	LIN/LOG Button	Press	Logarithmic distributed sweep when compared to step 15 linear sweep.

**Figure 2-2. Second Setup****Figure 2-3. Third Setup**

SECTION 3

OPERATION

3.1 CONTROLS AND CONNECTIONS

The generator front panel controls and connectors are shown in figure 3-1 and keyed to the following descriptions.

- 1 **Frequency Dial** — Settings under the dial index mark summed with **21** and multiplied by **4** determine the output signal frequency and the sweep start frequency in sweep mode. The dial is engraved with both linear and logarithmic scales: outer scale linear and inner scale logarithmic.
- 2 **POWER Button** — Turns generator ON and OFF.
- 3 **STOP Knob** — Sets the upper frequency limit when CONT **5** is depressed and SWP/STOP **6** is extended.
- 4 **FREQUENCY MULTIPLIER Controls** — Selects one of seven frequency multipliers for dial **1** setting.
- 5 **CONT Button** — Selects sweep submode to main generator's continuous mode. Extended is continuous (nonsweep) mode while depressed is sweep mode. Sweep is from a low frequency set by **1** to a high frequency set by **3**. Main generator mode control **8** must be in continuous mode (extended).
- 6 **SWP/STOP Button** — When button is depressed (and **5** depressed and **8** extended) selects repetitive sweep of the main generator frequency. When button is extended, the frequency is stopped at the upper sweep limit with upper frequency being set by STOP control **3**.
- 7 **LIN/LOG Button** — Selects linear or logarithmic frequency distribution of sweep,

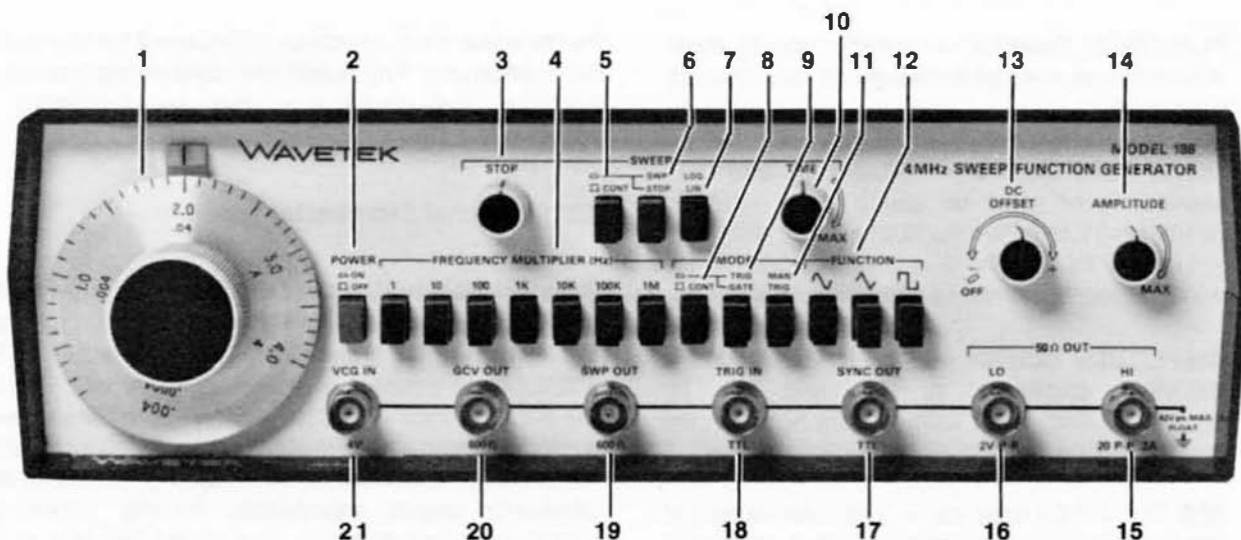


Figure 3-1. Controls and Connectors

VCG and main dial within a frequency range. Linear operation is selected when the button is extended. Logarithmic operation is selected when the button is depressed.

- 8, 9 Generator MODE Controls** — Selects one of the following three modes:

CONT — **8** released. Continuous output at 50 Ω OUT **15** and **16** and SYNC OUT (TTL) **17** connectors.

TRIG — **8** and **9** pressed. DC level output until generator triggered by the MAN TRIG **11** or with a signal at the TRIG IN connector **18**. When triggered, the generator output is one cycle of waveform followed by a dc level.

GATE — **8** pressed and **9** released. As for TRIG except the output is continuous for the duration of the manual or external trigger signal. The last cycle started is always completed.

- 10 TIME Knob** — Sets the sweep time by controlling the period of the sweep ramp generator.
- 11 Manual Trigger Button** — Triggers or gates the output signals when generator mode is TRIG or GATE (**8** pressed). In trigger mode, one waveform cycle is output when the button is pushed. In gate mode, waveform cycles are continuously output as long as the button is held in.
- 12 FUNCTION Selector** — Selects one of three waveforms or when all three buttons are released, a dc level.
- 13 DC OFFSET Control** — Offsets the 50 Ω OUT waveforms or gives dc levels from -10V to +10V (-5V to +5V into 50 Ω) at **15** and from -1V to +1V (-0.5V to +0.5V into 50 Ω) at **16**. An OFF position ensures no offset.
- 14 AMPLITUDE Control** — Ccw rotation reduces waveform amplitudes at **15** and **16** by 30 dB. DC and offset voltages are not affected by this control.
- 15 50 Ω OUT HI Connector** — The main output of the generator at the function selected. Maximum 20 Vp-p (10 Vp-p into 50 Ω) with 30 dB continuous amplitude control. 50 Ω source impedance.
- 16 50 Ω OUT LO Connector** — Same as **15** except 20 dB (1/10) lower in amplitude.

- 17 TTL OUT Connector** — A TTL square for each cycle of the generator. To be used for synchronization or as a TTL signal capable of driving 20 TTL loads.
- 18 TRIG IN Connector** — Accepts a TTL signal to trigger or gate the generator. Triggers on the rising (low to high) transition and gates during the positive (high) portion of the triggering signal.
- 19 SWP OUT Connector** — Supplies a ramp waveform with an approximate 4V peak into an open circuit. For use as a horizontal drive signal. Source impedance is 600 Ω .
- 20 GCV OUT Connector** — Provides a 0 to 4V open circuit output proportional to the frequency of the main generator. For use as a horizontal drive signal. Source impedance is 600 Ω .
- 21 VCG IN Connector** — Accepts ac or dc voltages to proportionately control frequency within the range determined by the FREQUENCY MULTIPLIER **4**. Positive voltage increases the frequency set by the dial **1**; negative voltage decreases the frequency. The VCG IN will not drive the generator frequency beyond the normal dial limits of a range. Input impedance is 2 k Ω .

3.2 OPERATION

Perform the initial checkout in Section 2 for the feel of the instrument. Any questions concerning individual controls and connectors may be answered in paragraph 3.1.

3.2.1 Signal Termination

Proper signal termination, or loading, of the generator connectors is necessary for its specified operation. For example, the proper termination of either of the 50 Ω OUT connectors is shown in figure 3-2. Placing the 50 Ω terminator, or 50 Ω resistance, in parallel with a higher impedance, matches the receiving instrument input impedance to the coax characteristic and generator output impedance, thereby minimizing signal reflection or power loss on the line due to impedance mismatch.

The input and output impedances of the generator connectors are listed below.

Connector	Impedance
50Ω OUT (HI)	50Ω
50Ω OUT (LO)	50Ω
SYNC OUT (TTL)	*
TRIG IN	*
VCG IN	2 kΩ
SWP OUT	600Ω
GCV OUT	600Ω

*The TTL OUT connector is diode protected and can drive up to 20 Transistor-Transistor-Logic (TTL) loads (low level between 0V and 0.4V, and high level between 2.4V and 5V). It should not be connected to resistive load less than 600Ω. The TRIG IN connector accepts TTL logic levels, is diode protected, and requires 500 μA drive from a high level output.

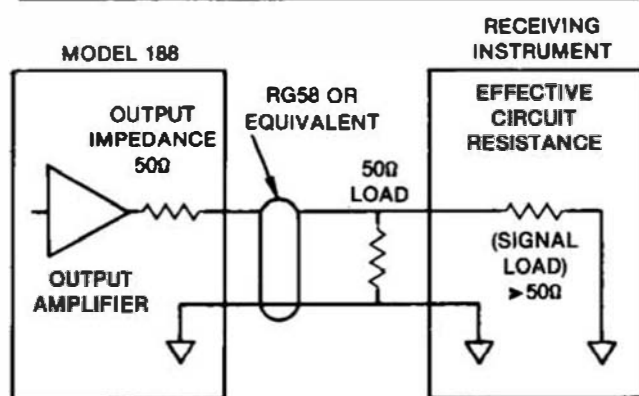


Figure 3-2. Signal Termination

3.2.2 Manual Function Generator Operation

For basic operation, select the waveform frequency and amplitude. The following steps demonstrate manual control of the function generator. (Bold numbers are keys to figure 3-1.)

Step Control/Connector	Setting
1 50Ω OUT 15 16	Connect circuit to either output (refer to paragraph 3.2.1).
2 FREQUENCY MULTIPLIER 4	Set to desired range of frequency.
3 Frequency Dial 1	Set to desired frequency within the range.
4 SWEEP's CONT 5	Extended.

5 FUNCTION 12	Set to desired waveform.
6 DC OFFSET 13	Set as desired. Limit waveform amplitude to prevent clipping (see figure 3-3).
7 AMPLITUDE 14	Select for desired amplitude.

3.2.3 Voltage Controlled Function Generator Operation

Operation as a voltage controlled function generator (VCG) is as for a manually controlled function generator, only the frequency within particular ranges is additionally controlled by an external voltage ($\pm 4V$ excursions) injected at the VCG IN connector. Perform the steps given in paragraph 3.2.2, only set the frequency dial to determine a reference from which the frequency is to be voltage controlled.

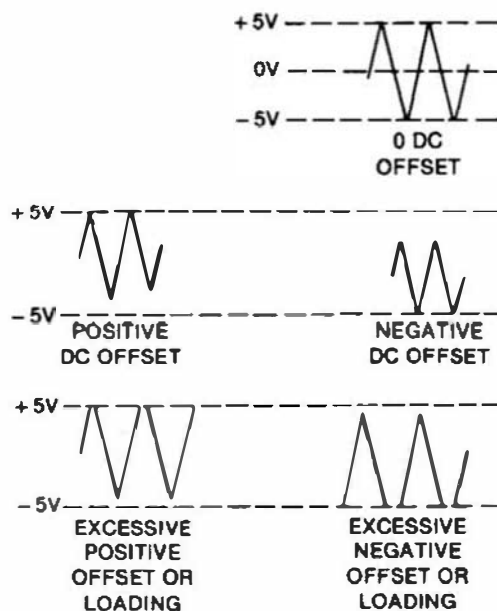


Figure 3-3. DC OFFSET Control

1. For frequency control with positive dc inputs at VCG IN, set the dial for a lower frequency limit.
2. For frequency control with negative dc inputs at VCG IN, set the dial for an upper frequency limit.
3. For modulation with an ac input at VCG IN, set the dial at the desired center frequency. Do not

exceed the maximum dial range of the selected frequency range.

Figure 3-4 is a nomograph with examples of dial and voltage effects. Example 1 shows that with 0V VCG input, frequency is determined by the main dial setting, 2 (linear mode) or .04 (logarithmic mode) in this example. Example 2 shows that with a positive VCG input, output frequency is increased. Example 3 shows that with a negative VCG input, output frequency is decreased. (Note that the Output Frequency Factor column value must be multiplied by a frequency range multiplier to give the actual output frequency.)

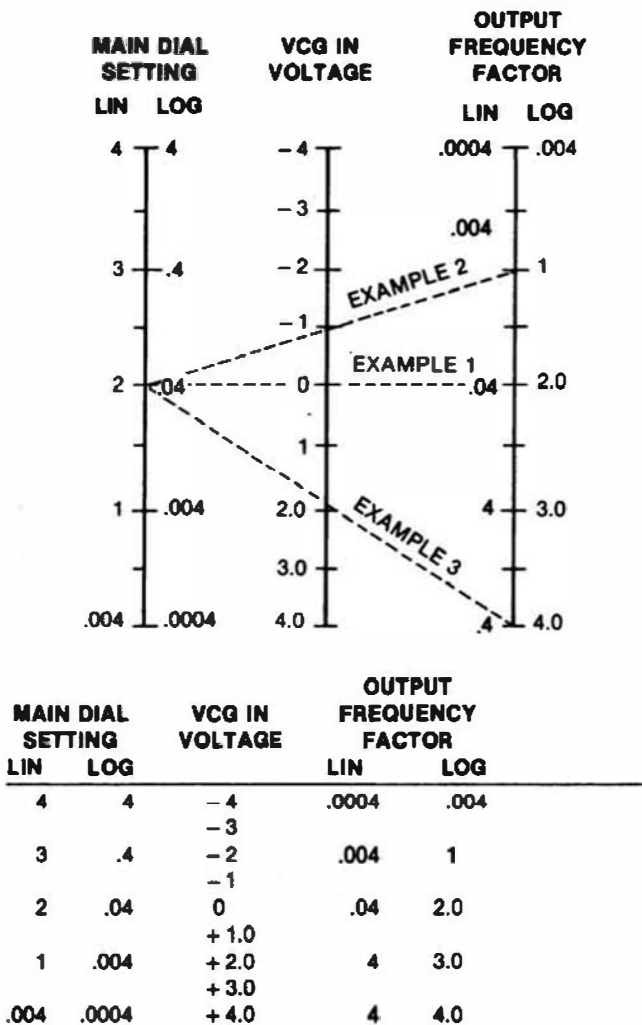


Figure 3-4. VCG Voltage-to-Frequency Nomograph

NOTE

Nonlinear operation may result when the VCG input voltage is excessive; that is,

when the attempted generator frequency exceeds the range limits. The upper limit is four times the multiplier setting, and the lower limit is 1/1000th (linear) or 1/10,000 (logarithmic) of the upper limit.

The up to 1000:1 (linear) or 10,000:1 (logarithmic) VCG sweep of the generator frequencies available in each range results from a 4V excursion at the VCG IN connector. With the frequency dial set to 4.0, excursions between -4V and 0V at VCG IN provide the up to 1000:1 (lin) or 10,000:1 (log) frequency sweep. With the dial set to .004 (linear) or .0004 (logarithmic), excursions between 0V and +4V at the VCG IN provide up to 1000:1 (linear) or 10,000:1 (logarithmic) sweep within the set frequency range.

3.2.4 Sweep Generator Operation

Operation as a sweep generator is similar to manually controlled generator operation except the main generator can be repetitively swept between two selected frequencies either linearly or logarithmically at a selected sweep rate. The relationship of internal ramp and main generator is shown in figure 3-5.

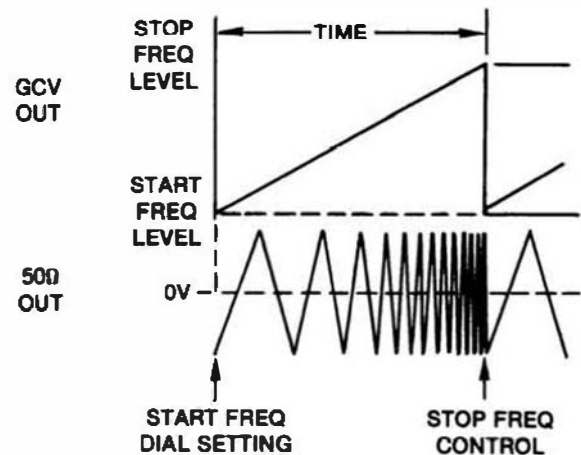


Figure 3-5. Effect of Sweep Time and Width on Output Frequency

3.2.5 Waveforms

The following steps describe the sweep operation setup.

Step	Control	Setting
1	MODE: CONT 8	Press to release. (Continuous mode of main generator is necessary for sweep.)
2	Frequency dial 1	Select sweep start frequency.
3	SWEEP's CONT 5	Depressed. (Selects sweep submode of main generator's continuous operation.)
4	SWP/STOP 6	Press to release. (Extended allows setting of stop frequency.)
5	STOP 3	Select the stop frequency. (The stop frequency will always be higher than the start frequency.)
6	Time 10	Sets the internal sweep rate.

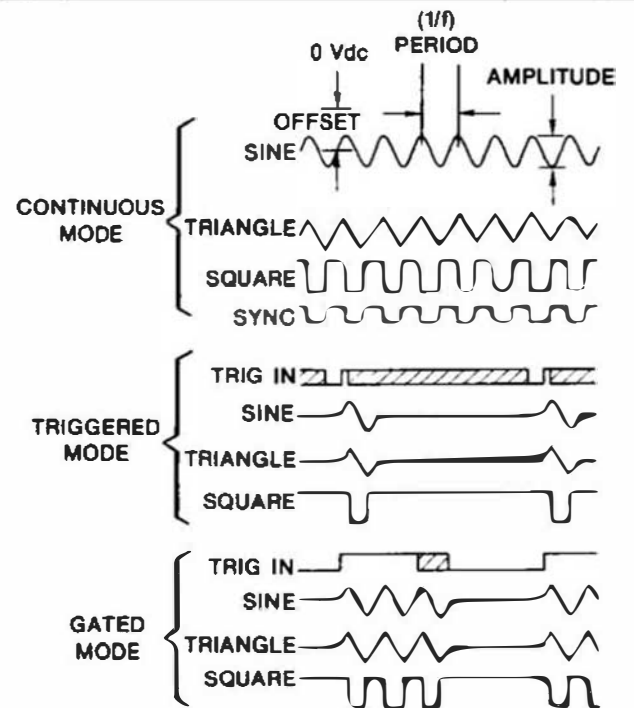


Figure 3-5. Waveform Characteristics

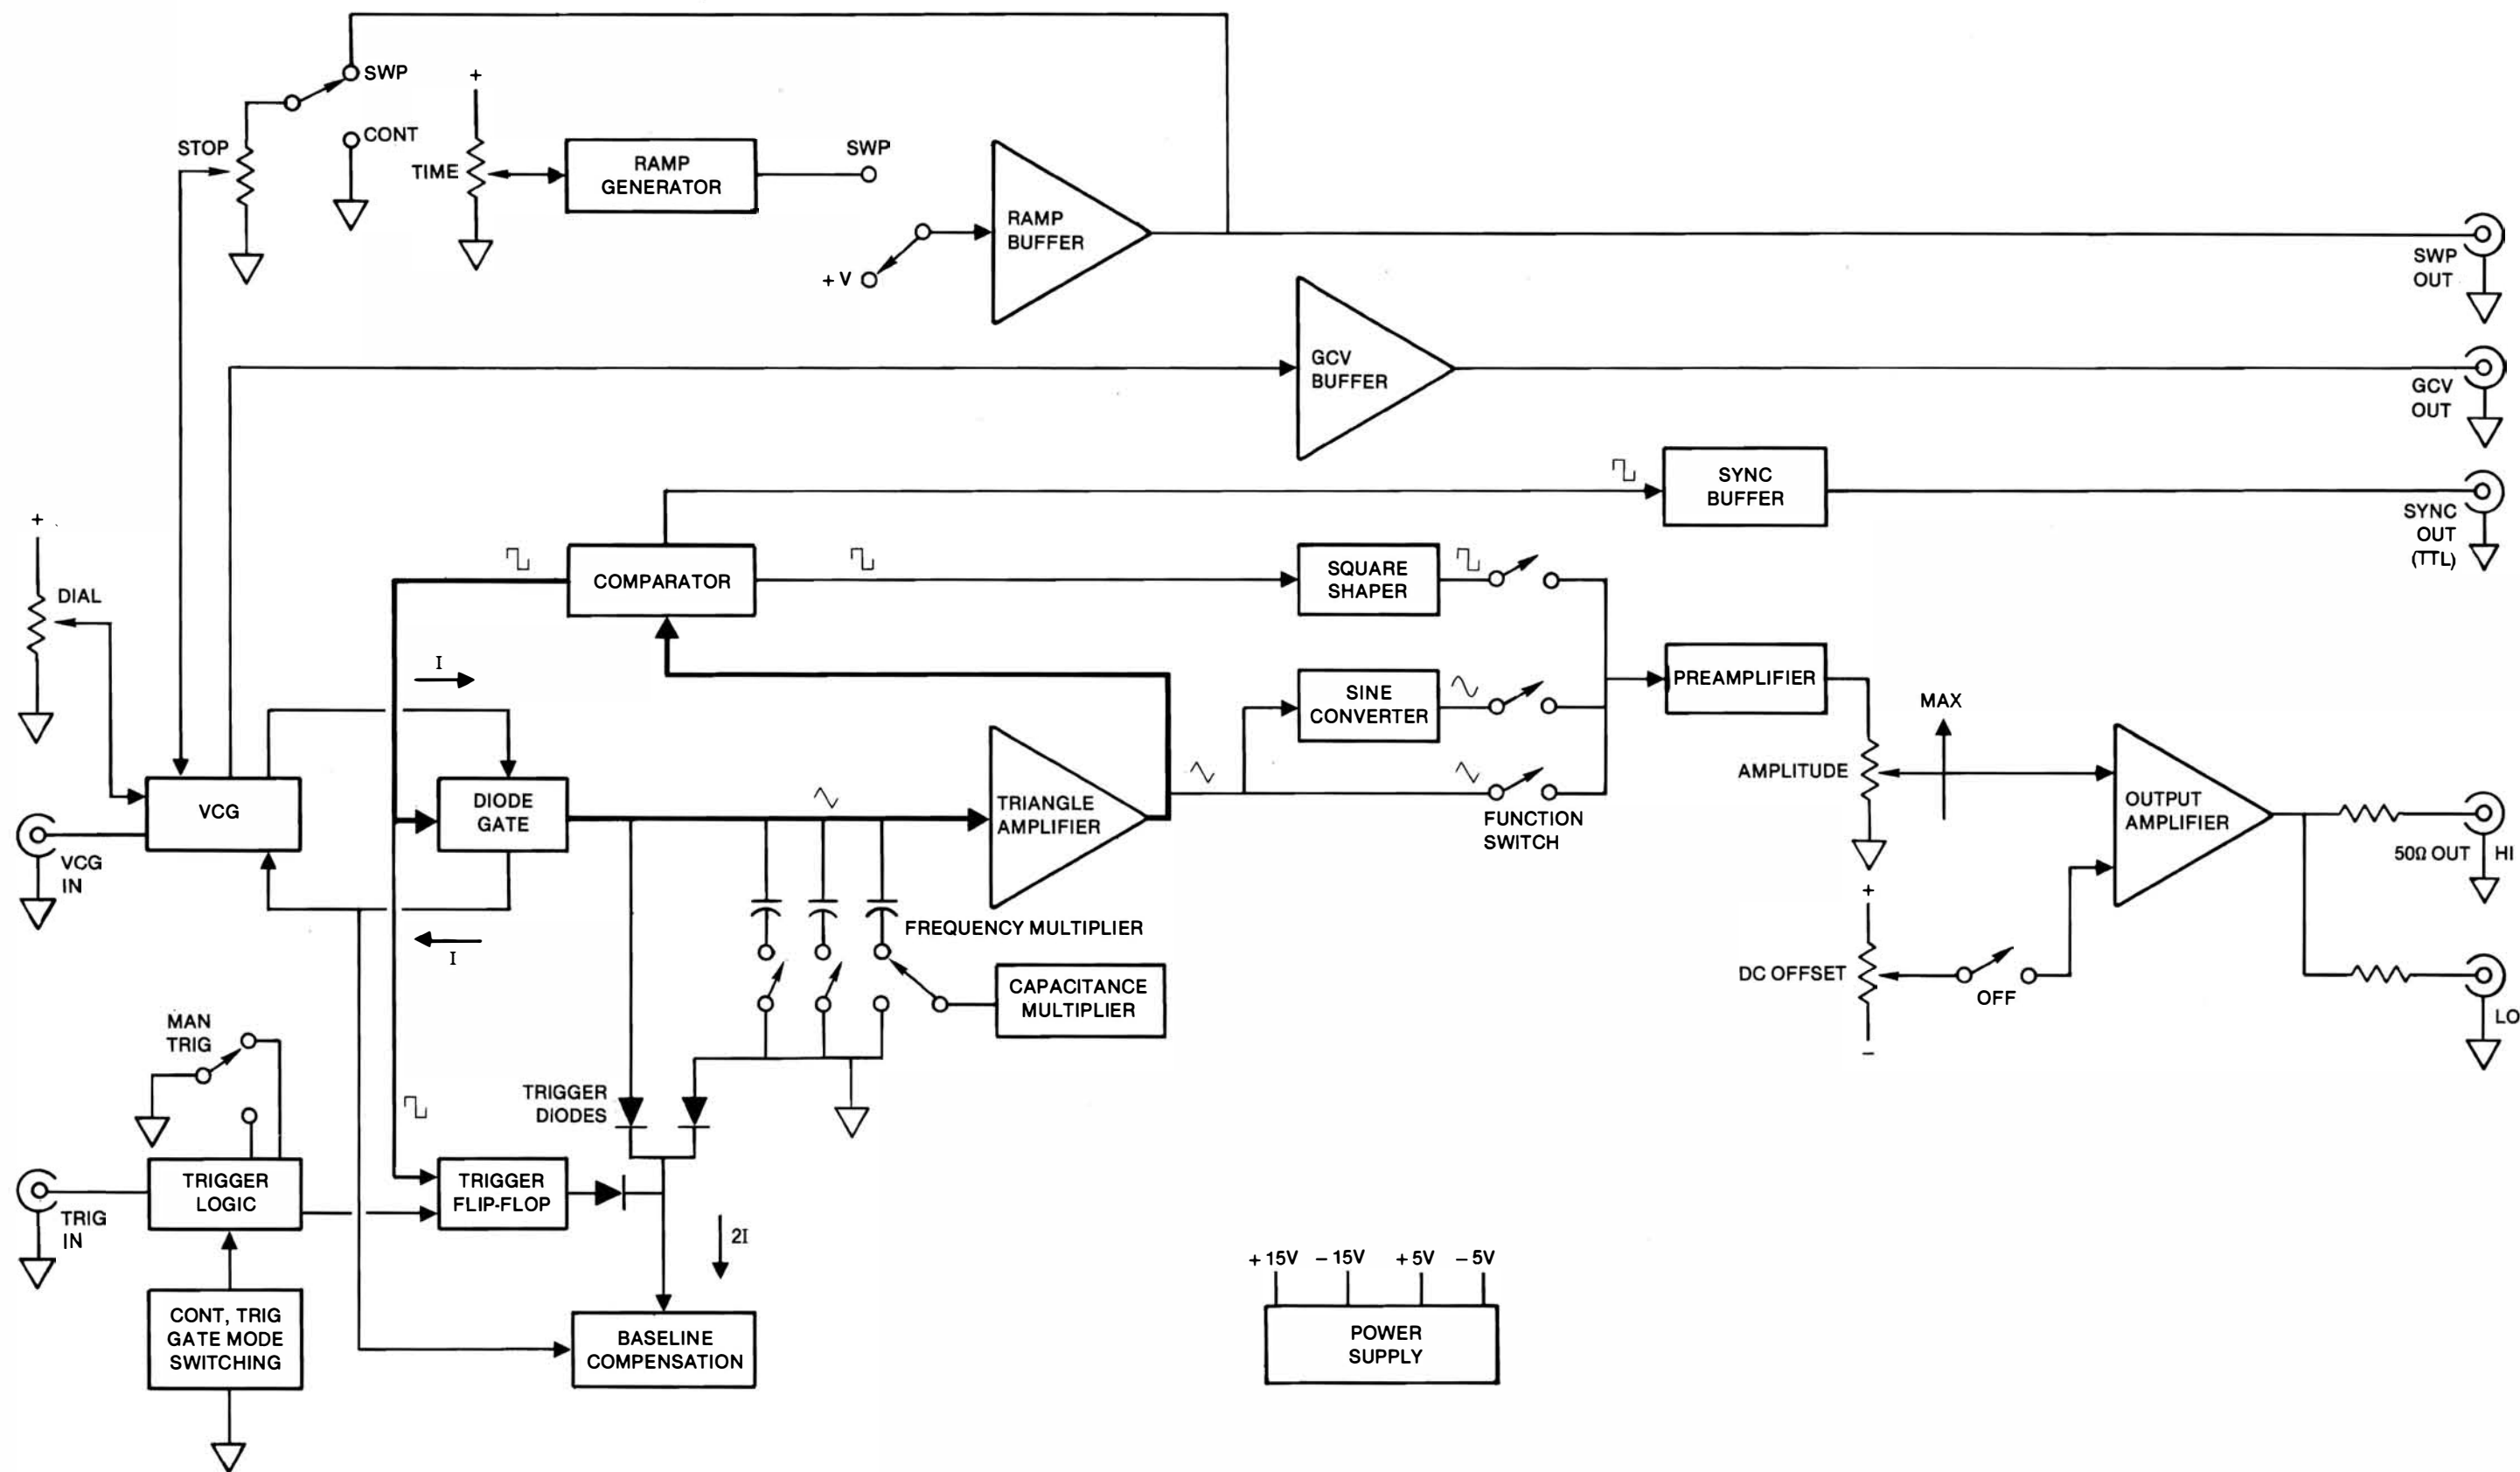


Figure 4-1. Function Block Diagram

SECTION 4

CIRCUIT DESCRIPTION

This section describes the functions of major circuit elements and their relationships to one another as shown in figure 4-1, functional block diagram. The following sections in this manual provide more detailed information for maintaining the instrument.

As shown in figure 4-1, the VCG (Voltage Control of Generator) sums voltage inputs from the frequency dial and the VCG IN connector. This sum voltage controls the magnitude of a complementary current source and current sink. This current varies linearly from approximately 2 mA to 2 μ A over a 1000:1 (4.0 to .004) range or logarithmically from approximately 2 mA to 0.2 μ A over a 10,000:1 (4.0 to .0004) range of each frequency multiplier. The VCG also controls the trigger baseline compensation circuit, which consists of another current sink at twice the current magnitude.

The diode gate, controlled by the comparator output, connects either the current source or the current sink to the timing capacitor selected by the frequency multiplier. When the current source is switched in, the charge on the timing capacitor will rise linearly, producing the positive-going triangle slope. Likewise, the current sink produces the negative-going triangle slope.

The triangle amplifier is a unity gain amplifier whose output is fed to the comparator and to the output circuits. The comparator operates as a window detector with limit points set to the triangle peaks. The ± 2 V output is sent back to the diode gate and to the output circuits. When the output is +2V, the triangle is positive-going until the +1.25V limit is reached and the comparator output switches to -2V. When the output is -2V, the triangle is negative-going until the -1.25V limit is reached and the comparator output switches back to +2V, repeating the process. In this manner, the basic function generator loop, the bold path in figure 4-1, produces simultaneous generation of triangle and square waves at the same frequency.

The output frequency is determined by the magnitude

of the timing capacitor selected by the frequency multiplier switches and by the magnitude of the currents supplied to and removed from it. Since the currents are linearly proportional to the sum of the VCG inputs, so will be the output frequency.

To extend the lower frequency capability of the generator, a capacitance multiplier circuit divides VCG currents by 10 (effectively multiplying the timing capacitor by 10) for each of the lower 3 multiplier ranges.

The TTL square from the comparator is buffered and sent to the SYNC OUT TTL connector. The other side is sent to the trigger flip-flop and to a level shifter to produce the ± 2 V bipolar square for the diode gate and the square shaper circuits. The square shaper converts the square into a current signal and applies it to the $\square$ FUNCTION switch. The buffered triangle is applied to the $\triangle$ FUNCTION switch and to the sine converter input. The sine converter, using the nonlinear characteristics of its diodes, converts the triangle into a sinusoidal current for the $\sim$ FUNCTION switch.

The selected function is sent to the preamplifier, where it is inverted and buffered. The preamplifier output goes to the output amplifier through the AMPLITUDE control where it is summed with offset voltage from the DC OFFSET control. Here, waveform and offset are inverted and amplified to a ± 10 V peak signal which can drive a 50 Ω termination from a 50 Ω source impedance. The output amplifier drives the 50 Ω OUT HI connector and a resistor divider producing the 50 Ω OUT LO output.

Noncontinuous modes of operation (trigger and gate) result from allowing or preventing the VCG current source from charging the timing capacitor. Whenever the trigger flip-flop output is low, each of the two trigger diodes conduct a current I, sourcing 2I to the baseline compensation circuit. This removes the current I from the VCG current source and forces a 0V baseline at the triangle amplifier input.

When the CONT switch is released, trigger logic is inhibited from passing any trigger signals and the trigger flip-flop output is held high. This prevents the trigger diodes from conducting and the generator loop operates continuously.

When the CONT switch is pressed, the generator loop is held at the 0V baseline. Pressing the TRIG/GATE switch puts the instrument in triggered mode and any external or manual trigger signals at the trigger logic input will be transformed into a narrow pulse corresponding to the low-to-high transition of the trigger input. This pulse sets the trigger flip-flop high and allows the generator loop to run. When the triangle negative peak is reached, the comparator low-to-high transition clocks the trigger flip-flop low and, when the 0V baseline level is reached, the generator loop again stops. The result is a single cycle generated after the triggering signal corresponding to 0 to 360° of phase. Successive triggered waveforms always start at the same 0° point.

Releasing the TRIG/GATE switch puts the instrument in the gated mode. This is identical to the triggered mode, except the trigger flip-flop is held high for the full duration of the triggering signal. The generator produces continuous waveforms during the time the external signal is high or the manual trigger switch is

held in. The last triggered cycle started is always completed and successive gated bursts always start at the 0° point.

When sweep mode is selected by a combination of the main generator in continuous mode and the ramp generator switches set to SWP, the ramp generator is enabled and a ramp voltage becomes part of the control voltage in the VCG circuit to control the main generator frequency. Ramp period, variable from 30 ms to 1 minute, is set by the TIME Control. Ramp generator output is buffered to drive the sweep output and VCG circuit. The ramp magnitude supplying the VCG input is controlled by the STOP potentiometer.

Selecting the stop switch position biases the buffer amplifier to a level equal to the positive peak of the ramp (+V). In this static mode the upper sweep limit can be set by the STOP Control.

When the CONT position of the SWEEP switch is selected the ramp generator is disabled and the buffered ramp is disconnected from the VCG input.

The GCV (Generator Control Voltage) from the VCG circuit is a resultant voltage from the three VCG inputs: dial, VCG IN and sweep ramp. This voltage is buffered and made available at the GCV BNC.

SECTION 5

ALIGNMENT

5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for alignment or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

5.2 REQUIRED TEST EQUIPMENT

Voltmeter . Millivolt dc measurement (1% accuracy)
 Oscilloscope ≥ 60 MHz bandwidth
 Counter 4 MHz (0.1% accuracy)
 50 Ω Feedthru $\pm 1\%$ accuracy, 2W
 Distortion Analyzer To 400 kHz
 RG58U Coax Cable . . . 3 ft length BNC male contacts

5.3 REMOVING GENERATOR COVERS

1. Invert the instrument and remove the four screws in the bottom cover.
2. Turn the instrument upright; remove the top cover for access to generator alignment controls.
3. When alignment is complete, secure the bottom cover with four screws.

NOTE

Remove the cover only when it is necessary to make adjustments or measurements.

5.4 ALIGNMENT

After referring to the following preliminary data, perform alignment, as necessary, per table 5-1. If performing partial alignment, check previous settings and adjustments for applicability. See figures 5-1 and 5-2 for alignment control location.

1. All measurements made at the FUNCTION OUT connector must be terminated into a 50 Ω ($\pm 1\%$) load.
2. Start the alignment by connecting the unit to an appropriate ac power source and setting the front panel switches as follows.

POWER	ON
Frequency Dial	4.0
FREQ MULT (Hz)	$\times 1K$
MODE CONT	CONT (released)
FUNCTION	
DC OFFSET	OFF
AMPLITUDE	MAX
LIN/LOG	LIN (released)
SWEEP's CONT	CONT (released)
SWP/STOP	STOP (released)

3. Allow the unit to warm up at least 30 minutes for final alignment. Keep the instrument cover on to maintain heat. Remove cover only to make adjustments or measurements.

Figure 5-1. Alignment Point Location,
Generator Board

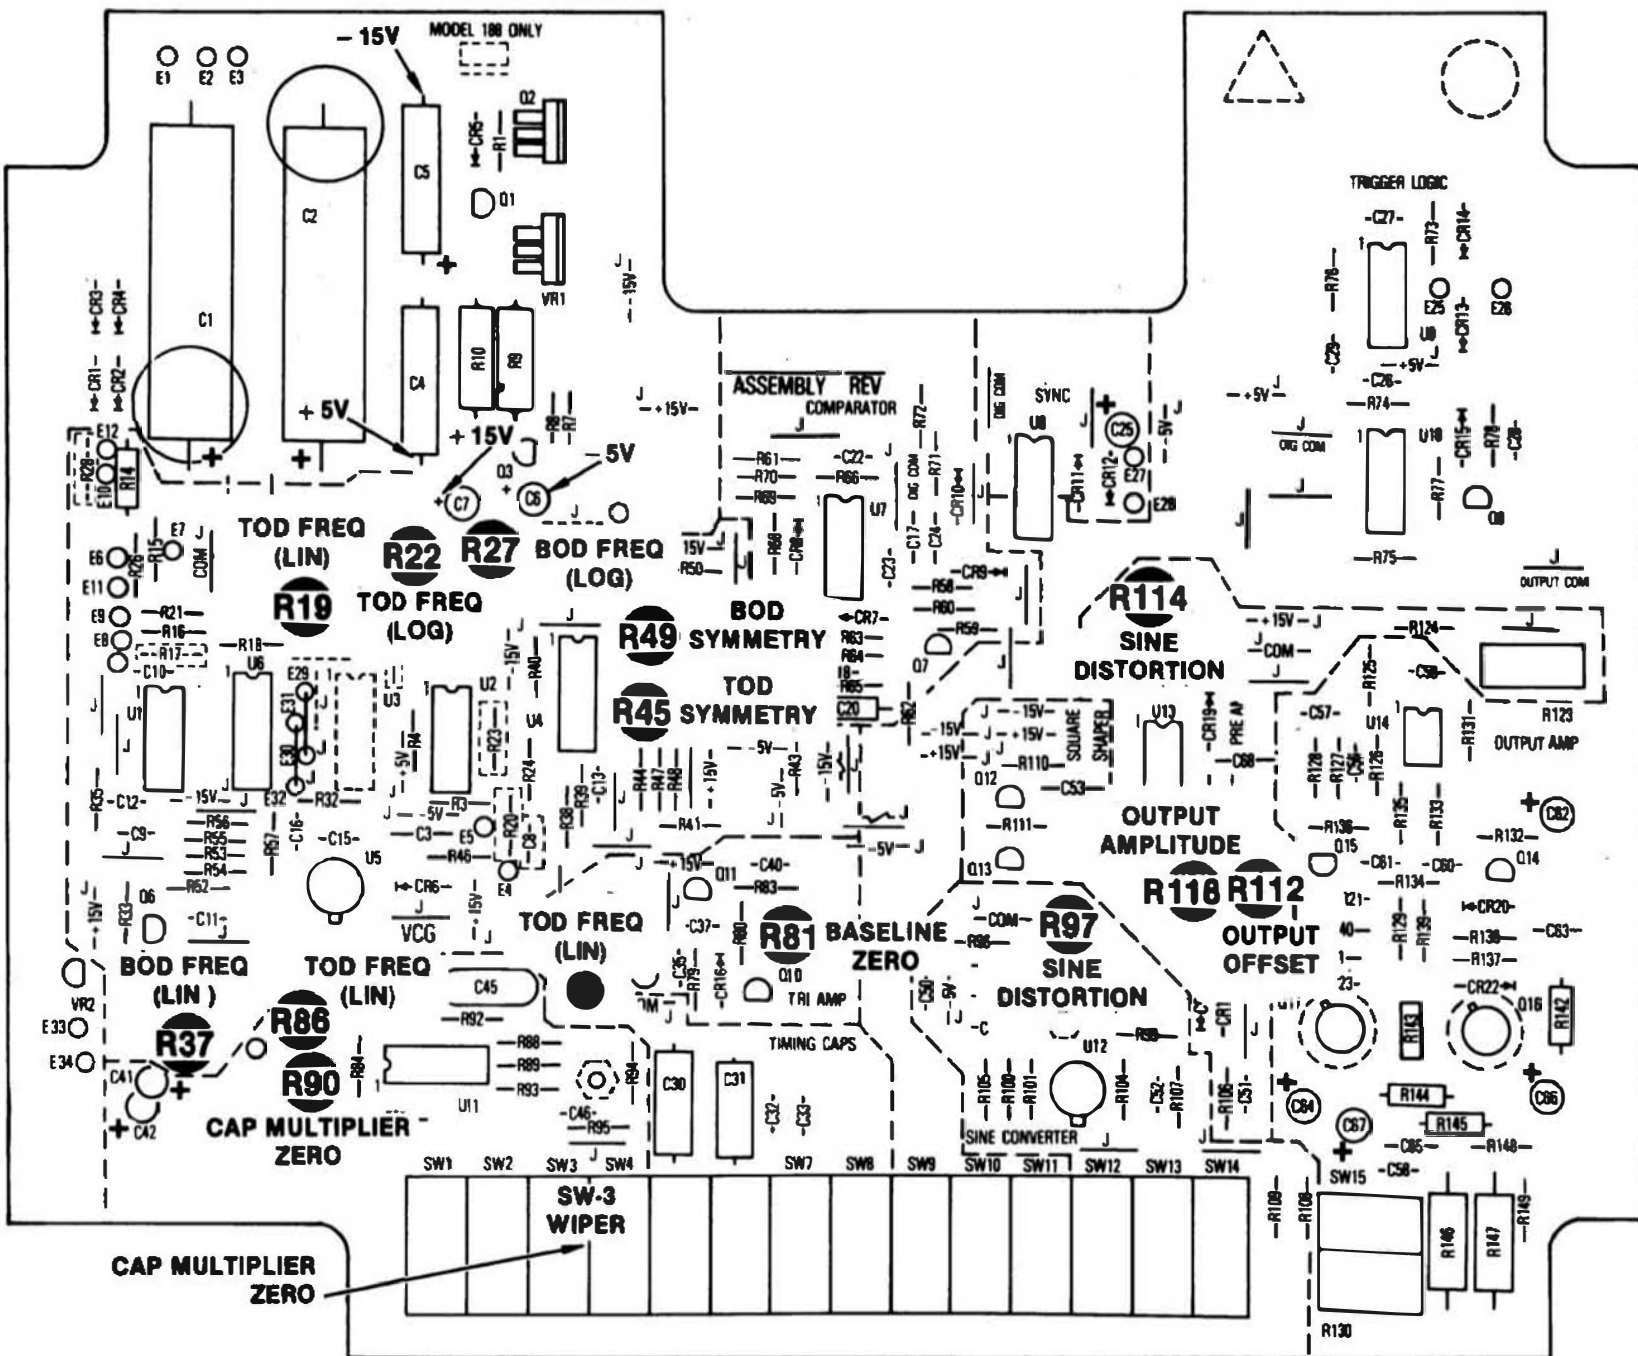


Table 5-1. Alignment Procedure

Step	Check	Tester	Test Point	Control Setting	Adjust	Result	Remark
1	Power Supply	Voltmeter	C4 +	Paragraph 5.4, Step 2		+ 15 $\pm$.75V	Verify. $\pm$ 15V should track within 30 mV
2			C5 -			- 15 $\pm$.75V	
3			C7 +			+ 5 $\pm$.25V	
4			C6 -			- 5 $\pm$.25V	
5	Capacitor Multiplier Zero		SW3 - B Wiper		R90	0 $\pm$ 2V	
6	Approximate Bottom of the Dial Frequency	Counter	50 Ω OUT HI (terminate into 50 Ω)	Dial: .004 FREQ MULT: 10K	R37	20 ms period	Set scope to (-) trigger; display one full cycle. Align positive transition to center of screen (horizontal) display $\times$ 10). Set scope to (+) trigger; adjust R49 to align negative transition with center of screen
7	Bottom of the Dial Symmetry	Scope			R49	Equalize (+) and (-) half cycles	
8	Bottom of the Dial Frequency (Lin)	Counter		FREQ MULT: $\times$ 1K	R37	250 (+ 50/ - 0) ms period	
9	Top of the Dial Symmetry	Scope		Dial: 4.0	R45	Equalize (+) and (-) half cycles	See step 7
10	Top of the Dial Frequency (Lin)			Dial: 4.0 FREQ MULT: $\times$ 1K	R19	4 ($\pm$.2) kHz	Verify
11				FREQ MULT: $\times$ 10K		40 ($\pm$.8) kHz	
12				FREQ MULT: $\times$ 1M	C34	4 ($\pm$.02) MHz	Verify. If necessary, trim by changing value of C33
13				FREQ MULT: $\times$ 100K		400 ($\pm$ 8) kHz	
14				FREQ MULT: $\times$ 100	R86	2.5 ($\pm$.05) ms	Verify
15				FREQ MULT: $\times$ 10		25 ($\pm$.5) ms	
16				FREQ: $\times$ 1		250 ($\pm$ 5) ms	
17	Bottom of the Dial Frequency (Log)			Dial: .0004 FREQ MULT: $\times$ 10K SWEEP: CONT, STOP, LOG	R27	250 (+ 50/ - 0) ms	

Table 5-1. Alignment Procedure (Continued)

Step	Check	Tester	Test Point	Control Setting	Adjust	Result	Remark
18	Top of the Dial Frequency (Log)			Dial: 4.0 FREQ MULT: $\times 1K$	R22	4 ($\pm .1$) kHz	It may be necessary to reduce amplitude to 5V peak
19	Sine Distortion	Distortion Analyzer		FUNCTION: FREQ MULT: $\times 1K$	R97 R114	Adjust for minimum distortion	
20	Output Amplitude	Scope		FUNCTION: $\sim$	R118	10 Vp-p (+ .3V/ - 0V)	
21	Output Offset	Voltmeter		FUNCTION: $\sim$	R112	0 (± 50) mv	
22	Baseline Zero	Scope		MODE: Trigger	R81	0 (± 75) mv	It may be necessary to trim the baseline with R80
23	Sweep Offset	Voltmeter	SWP OUT (Unterminated)	SWEEP: CONT, SWP, LIN	R9 (Sweep board board)	0 (± 2) mv	

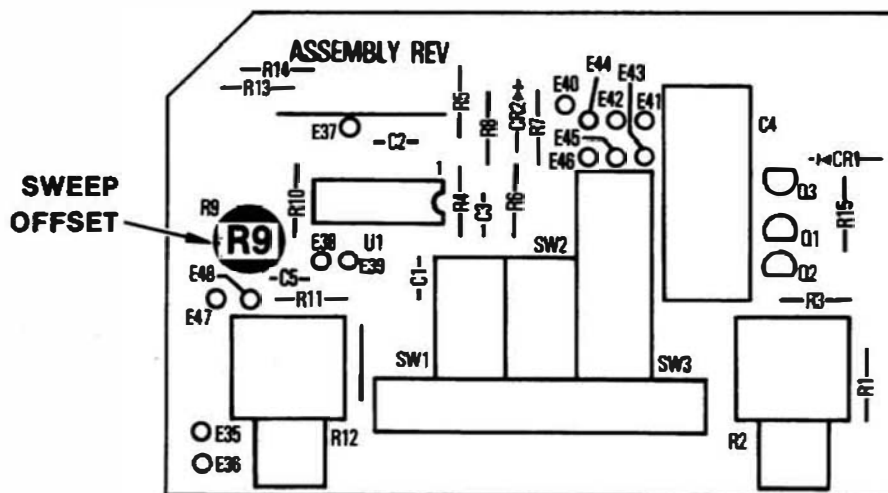


Figure 5-2. Alignment Point Location, Sweep Board

SECTION 6

TROUBLESHOOTING

6.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for alignment or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

6.2 TROUBLESHOOTING TABLES

Table 6-1 gives an index of the troubleshooting tables by indications of common problems. The tables do not cover every possible trouble, but, when used in conjunction with circuit descriptions and schematics, will be an aid in systematically isolating faulty components.

6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS

6.3.1 Transistor

1. A transistor is defective if more than one volt is measured across its base-emitter junction in the forward direction.
2. A transistor when used as a switch may have a few volts reverse bias voltage across base-emitter junction.
3. If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.
4. A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).
5. In a transistor differential pair (common emitter stages), either their base voltages are the same in normal operating condition, or the one with less forward voltage across its base emitter junction should be off (no collector current); otherwise, one of the transistors is defective.

6.3.2 Diode

A diode (except a zener) is defective if there is greater than one volt (typically 0.7 volt) forward voltage across it.

6.3.3 Operational Amplifier

1. The "+" and "-" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.
2. When the output of the amplifier is connected to the "-" input (voltage follower connection), the output should be the same voltage as the "+" input voltage; otherwise, the operational amplifier is defective.
3. If the output voltage stays at maximum positive, the "+" input voltage should be more positive than the "-" input voltage, or vice versa; otherwise, the operational amplifier is defective.

6.3.4 FET Transistor

1. No gate current should be drawn by the gate of an FET transistor. If so, the transistor is defective.
2. The gate-to-source voltage is always reverse biased under a normal operating condition; e.g., the source voltage is more positive than the gate voltage for 2N5485, and the source voltage is more negative than gate voltage for a 2N5462. Otherwise, the FET is defective.
3. If the device supplying gate voltage to an FET saturates, the FET has too large a V_{gs} (pinch off) for the circuit and should be replaced.

6.3.5 Capacitor

1. Shorted capacitors have zero volts across their terminals.

2. Opened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

6.4 GENERAL INSTRUCTIONS

When encountering a problem, it is advisable to return as many of the front panel controls as possible to their initial settings and still retain the problem. The troubleshooting tables in this section generally begin at these initial settings and specify all subsequent setups. Preset the front panel controls as follows.

Control	Position
Frequency Dial	4.0
POWER	ON
FREQ MULT (Hz)	1K
FUNCTION	^
DC OFFSET	OFF
AMPLITUDE	MAX
SWEEP	CONT, STOP, LIN

CAUTION

To prevent damage to components, turn unit off while removing or replacing components, connectors or pc boards.

The suspected malfunctioning condition should be double checked to eliminate the possibility of improper settings or connections. Before attempting fault isolation, the unit should be checked for proper line voltage selection (refer to Section 2). A good visual inspection of the boards and chassis wires for damage or overheating often saves much time.

Once the malfunction is defined, begin the isolation procedure by selecting an indication in table 6-1 which best describes the malfunction and proceed to the referenced troubleshooting table.

Follow through the checks in the troubleshooting table, using schematics and assemblies as a guide. When positive results are not obtained, perform the indicated corrective procedure.

Table 6-1. Fault Isolation

Indication	Table
1. Fuse blown, no power indication or no outputs.	6-2
2. Function outputs missing or clipped when TTL sync OK. Triangle problem.	6-3
3. Sine waveform problem.	6-4
4. Square waveform problem.	6-5
5. TTL sync output problem.	6-6
6. Generator frequency does not respond correctly to dial and VCG input.	6-7
7. Waveform symmetry problem.	6-8
8. Problem on bottom three ranges only.	6-9
9. Generator trigger and gate mode problem.	6-10
10. Sweep problem.	6-11

Table 6-2. Power Supplies and Generator Loop

<i>Indication: Fuse blown, no power indication or no outputs.</i>	
Check	Corrective Procedure
1. Set all controls in their initial positions (refer to paragraph 6.4).	Replace fuse; check for normal operation. a. CR1 - CR4. b. C1, C2. c. SW1. d. T1, RV1, F1 (bracket assembly).
2. Ensure line voltage matches instrument configuration (refer to Section 2). Check fuse.	
3. Check C1 (+) and C2 (-) for ± 20 to 26V unregulated dc.	

Table 6-2. Power Supplies and Generator Loop (Continued)

<i>Indication: Fuse blown, no power indication or no outputs.</i>	
Check	Corrective Procedure
4. Check indicator lamp.	DS1 and VR2, wiring E34 and E33.
5. Check C4 (+) for +15 Vdc.	a. VR1. b. Excessive loading; use board jumpers to isolate cause.
6. Check C5 (–) for –15 Vdc.	a. Q2. b. U2Q1. c. Excessive loading; use board jumpers to isolate cause.
7. Check U7 pin 14 for +5 Vdc and U7 pin 13 for –5 Vdc.	a. Q4, Q3, U2. b. Excessive loading; use board jumpers to isolate cause.
8. Check U4 pin 6 for a dc shift from approximately +10V to +15V as the frequency dial is rotated from 4.0 to .004. Check U6 pin 8 for a dc shift from –10V to –15V as the frequency dial is rotated from 4.0 to .004.	Go to table 6-7.
9. Check anode CR126 for approximately +3.5 Vdc.	Go to table 6-10.
10. If emitter Q11 has a 4 kHz, $\pm 1.25V$ triangle, go to table 6-3.	
11. Check for the same voltage at the gate of Q9 as at the emitter of Q11, within saturation limits of the amplifier.	Q9 - Q11 and associated circuitry.
12. If the voltage at the emitter of Q11 is $\geq +1.25V$, check cathode CR10 for approximately –2.5V. If the voltage at the emitter of Q11 is $\leq -1.25V$, check cathode CR10 for approximately +2.5V.	U7, Q7 and associated circuitry.
13. Check U5.	

Table 6-3. Output Circuits

<i>Indication: Function outputs missing or clipped when TTL sync output OK. Problem with triangle waveform.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check emitter Q1 for a 4 kHz, $\pm 1.25V$ triangle.	Go to table 6-2.
3. Select triangle function, rotate AMPLITUDE ccw, and check U13 pin 10 for a $\pm 1.25V$ triangle.	a. R114 R118 adjustments. b. U13. c. SW13.

Table 6-3. Output Circuits (Continued)

Indication: Function outputs missing or clipped when TTL sync output OK. Problem with triangle waveform.

Check	Corrective Procedure
4. Rotate AMPLITUDE cw (MAX), DC OFFSET to OFF, and check 50 Ω OUT (HI) for a 20V p-p (open circuit) triangle.	a. Output amplifier circuit. b. E15, E16 wiring.
5. Check for excessive discontinuities at the triangle peaks near the bottom of a frequency range (other than $\times 1$ to $\times 100$).	a. U5. b. SQR signal at cathode CR10 not $\pm 2.5V$.
6. Check for nonlinearities in the triangle slopes near the bottom of a frequency range (other than $\times 1$ to $\times 100$).	a. Associated timing capacitor or C36. b. U5, CR6. c. Q9, Q10.
7. Check for a waveform symmetry problem.	Go to table 6-8.

Table 6-4. Sine Conversion

Indication: Sine waveform problem.

Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check emitter Q11 for a 4 kHz, $\pm 1.25V$ triangle.	Go to table 6-2.
3. Verify that the $\pm 1.25V$ triangle peaks at the emitter of Q1 agree within 3%.	a. R62, R63, R64, R65, R67, R68, R70. b. CR8, CR9, U7. c. $\pm 15V$ supplies.
4. Select triangle function; check for $\pm 1.25V$ triangle at U13 pin 10.	Go to table 6-3, step 3.
5. Select sine function; check for $\pm 1.25V$ sine at U13 pin 10.	a. U12 circuitry. b. SW12.
6. Check sine distortion 50 Ω OUT (HI) per calibration procedure (refer to table 5.1).	a. R97, R114 adjustments. b. Waveform symmetry, R45 adjustment and table 6-8. c. U12 circuitry.
7. Check sine amplitude vs frequency per specifications (refer to section 1).	C47, C55, C56, C57.

Table 6-5. Square Function

<i>Indication: Square waveform problem.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check CR10 cathode for a 4 kHz, approximately $\pm 2V$ square wave.	Go to table 6-2.
3. Select a triangle function; check U13 pin 10 for a $\pm 1.25V$ triangle.	Go to table 6-3.
4. Select square function; check U13 pin 10 for a $\pm 1.25V$ square.	a. Q12, Q13 circuitry. b. SW14.
5. Check square wave at 50 Ω OUT (HI) for the same 20V p-p (open circuit) amplitude as the triangle and sine.	R106, R110, R111.
6. Check rise/fall times of 4 MHz square (50 Ω terminated) for < 50 ns.	C51, C55, C56, C57.

Table 6-6. TTL Sync Output

<i>Indication: TTL sync output problem.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check U8 pin 1 for a TTL level, 4 kHz square.	Go to table 6-2.
3. Check U8 pin 8 for a TTL level, 4 kHz square.	a. U8. b. CR11, CR12.
4. Check SYNC OUT TTL.	E27, E28, E19 wiring.
5. Check SYNC OUT waveform at 4 MHz, using a TTL load termination or a $\geq 600\Omega$ resistive termination and ≤ 3 foot RG58U coax.	a. U8. b. E19 ground connection.

Table 6-7. VCG Circuit

Indication: Generator does not respond correctly to dial and VCG input.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check for approximately +15V at E11.	a. E10, E11 and E12 wiring. b. +15V supply. c. Dial potentiometer.
3. Check for 0 ± 5 mV at U1 pin 13.	U1.
4. Check U1 pin 14 for approximately -5V.	U1.
5. Check that as the dial is rotated from 4.0 to .004, the voltage at U1 pin 14 varies from approximately -5 to 0V.	U1.
6. Ensure that U1 pin 5 remains at a constant $0V \pm 40$ mV as the dial is varied.	U1, U4, and U6 circuits.
7. Check that, as the dial is rotated from .004 to 4.0, the voltage at U1 pin 1 does not saturate near -15V or +15V (typical range is between -10V and +10V) and stops varying with the dial.	Q6, U1, and U6 circuits.
8. Check that as the dial is rotated from .004 to 4.0, U6 pin 8 varies from approximately -15V to -10V.	U6, U1, and Q6 circuits.
9. Check that, as the dial is rotated from .004 to 4.0, the voltage at U1 pin 7 does not saturate near +15V or -15V (typical range is between +10V and -10V) and stops varying with the dial.	U4 and U1 circuits.
10. Check that, as the dial is rotated from .004 to 4.0, U4 pin 13 varies from approximately +15V to +10V.	U4 and U1 circuits.
11. Check for nonlinearity in the $\pm 1.25V$ triangle at the emitter of Q11 near the bottom of the $\times 1K$ through $\times 1M$ ranges.	a. Associated timing capacitors or C36. b. U5, CR6. c. Q9, Q10.
12. Check frequencies of $\times 1K$, $\times 10K$ and 100K ranges.	a. Adjust R19. b. C30, 31 and 32 (trimmed by C20).
13. Check frequency and linearity of $\times 1M$ range.	a. C34. b. C36 nominal value. c. C18, 19, 20 and 21.
14. Check frequencies of $\times 1$, $\times 10$ and $\times 100$ ranges.	R86 and table 6-9.
15. Select log mode. Check that as the frequency dial is rotated from 4.0 to .0004, U3 pin 4 varies from approximately -.65V to -.45V.	a. U3. b. U1 circuit.

Table 6-8. Symmetry

<i>Indication: Waveform symmetry problem.</i>	
Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. If symmetry problem appears on $\times 1$, $\times 10$, $\times 100$ ranges only, problem may be R90 adjustment or go to table 6-9.	
3. Perform steps 5 through 12 of table 6-7, then return to this table.	a. R49 adjustment. b. R44, adjustment.
4. Verify RUN signal at cathode CR6 is approximately +3.5V.	Go to table 6-10.
5. Verify U6 pin 4 and U6 pin 15 vary from approximately -10 to -15V as dial is rotated from 4.0 to .004.	U1, U6, R52, R53.
6. Verify amplitude of SQR signal at cathode CR10 is approximately $\pm 2V$.	a. Q7 circuit. b. U7 circuit. c. +5V supply.
7. Check U5, CR6.	

Table 6-9. Capacitance Multiplier

<i>Indication: Problem on bottom frequency ranges only.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation on $\times 1K$ range.
2. Check for 0 Vdc at U11 pins 2 and 6.	SW2 - SW4.
3. Check for approximately 0 Vdc at U11 pin 12.	U11 circuitry.
4. Check for 0 Vdc ± 5 mV at U11 pin 10.	a. R90 adjustment. b. U11 circuitry.
5. Select $\times 100$ range; check U11 pin 10 for heavy oscillations.	C46, U11.
6. Check that the signal at U11 pin 2 is amplified by approximately 6 at pin 12 (within saturation limits).	U11 circuitry.
7. Check for the same signal at U11 pins 6 and 7 as at the emitter of Q11.	SW4, U11 circuitry.
8. Ensure that R93 and R94 are shorted in the $\times 100$ range.	SW4.

Table 6-9. Capacitance Multiplier (Continued)*Indication: Problem on bottom frequency ranges only.*

Check	Corrective Procedure
9. Check 400 Hz frequency (2.0×100).	a. R86 adjustment. b. R89, R95, C45.
10. Check 40 Hz frequency (2.0×10).	R93, SW3.
11. Check 4 Hz frequency (4.0×1).	R94.
12. Check symmetry at 0.2×100 ; ensure triangle is linear.	a. R90 adjustment. b. U11. c. Leaky C30, C36, C45, C46, CR6, U5, Q9.

Table 6-10. Trigger Logic*Indication: Generator trigger and gate mode problems.*

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal continuous operation.
2. If generator operates normally in continuous mode, go to step 7.	
3. Check for 0V at U9 pins 2 and 5.	SW9.
4. Check for a TTL low at U10 pin 10.	U9, +5V supply.
5. Check for +5V at U10 pin 9.	a. U10. b. CR6, CR15, Q8. c. U6.
6. Check for approximately +3.5V at anode CR6. Check for normal continuous mode operation.	a. CR6, U6, Q8. b. Go to table 6-2.
7. Check that U6 pin 4 and U6 pin 15 vary from approximately -10V to -15V as dial is rotated from 4.0 to .004.	a. U6, R52, R53. b. Go to table 6-7.
8. Go to gated mode (CONT depressed, TRIG/GATE released). Check U9 pin 2 for a TTL high.	a. U10. b. SW9, SW11, +5V supply.

Table 6-10. Trigger Logic (Continued)*Indication: Generator trigger and gate mode problems.*

Check	Corrective Procedure
9. Check U9 pin 1 for a TTL high.	a. U9. b. R73, – 5V supply.
10. Check U10 pin 10 for a TTL high.	a. U9. b. U10.
11. Check U10 pin 9 for TTL low.	a. U10. b. Q8.
12. Check anode CR6 for approximately – 1.5V.	a. CR15, Q8, R78. b. CR6.
13. Check cathode CR6 for approximately – 0.7V.	a. U5. b. U6.
14. Check emitter Q11 for 0 Vdc $\pm$ 100 mV.	a. R81 adjustment. b. Q9 - Q11 circuitry.
15. Connect an external TTL signal to TRIG IN connector; check for the inverse of that signal at U10 pin 10.	a. E25, E26. b. CR13, CR14. c. U9, SW10.
16. Press TRIG/GATE switch and check for an approximate 20 ns negative pulse at U10 pin 10 following the low-to-high transition of the external signal (increasing the frequency of the external generator makes this pulse more visible).	a. U9, SW10. b. C29.
17. Remove the external signal and verify that U10 pin 5 goes from high to low when the MAN TRIG switch is held depressed.	a. SW11. b. U10.
18. Release the TRIG/GATE switch (gated) and check that U10 pin 10 goes from high to low when the MAN TRIG switch is pressed.	SW9.
19. Monitor 50 Ω OUT, triangle function, for 0 Vdc baseline.	R81, R112 adjustments.
20. Press MAN TRIG switch and check 50 Ω OUT for a continuous triangle while the switch is held. Depress TRIG/GATE switch (triggered) and verify a single cycle output each time the MAN TRIG switch is depressed.	a. U10 or clock signal to U10 from U7. b. C29 (pulse too narrow).

Table 6-11. Sweep Circuit*Indication: Sweep or Ramp problems.*

Check	Corrective Procedure
1. Depress CONT (Sweep). Extend SWP/STOP. Check E48 for +4V.	a. U1. b. SW2.
2. Depress SWP/STOP. Check collector of Q3. 4V peak ramp. If ramp amplitude is >4V peak. If ramp amplitude is <4V peak.	U1, Q3. Q1, Q2.
4. At SWP OUT check for period change of approximately 30 ms to 60s as the TIME control is rotated from full ccw to full cw.	Q2, R22.
5. At SWP OUT check for ramp period drift.	C4.
6. At E39 with STOP control full cw, ramp amplitude is 4V peak, with STOP control full ccw, ramp amplitude is 0V.	R12, SW1, SW2.

SECTION 7

PARTS AND SCHEMATICS

7.1 DRAWINGS

The following assembly drawings (with parts lists) and schematics are in the arrangement shown below.


7.2 ORDERING PARTS

When ordering spare parts, please specify part number, circuit reference, board, serial number of unit, and, if applicable, the function performed.

7.3 ADDENDA

Under Wavetek's product improvement program, the latest electronic designs and circuits are incorporated into each Wavetek instrument as quickly as development and testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, addendum pages are prepared to summarize the changes made and are inserted immediately inside the rear cover. If no such pages exist, the manual is correct as printed.

Drawing	Drawing No.
Instrument Schematic	0004-00-0165
Chassis Assembly	0102-00-0836
Chassis Parts List	1101-00-0836
Generator Board Schematic	0103-00-0817
Generator Board Assembly	1100-00-0818
Generator Board Parts List	1100-00-0817
Sweep Board Schematic	0103-00-0818
Sweep Board Assembly	1100-00-0818
Sweep Board Parts List	1100-00-0818

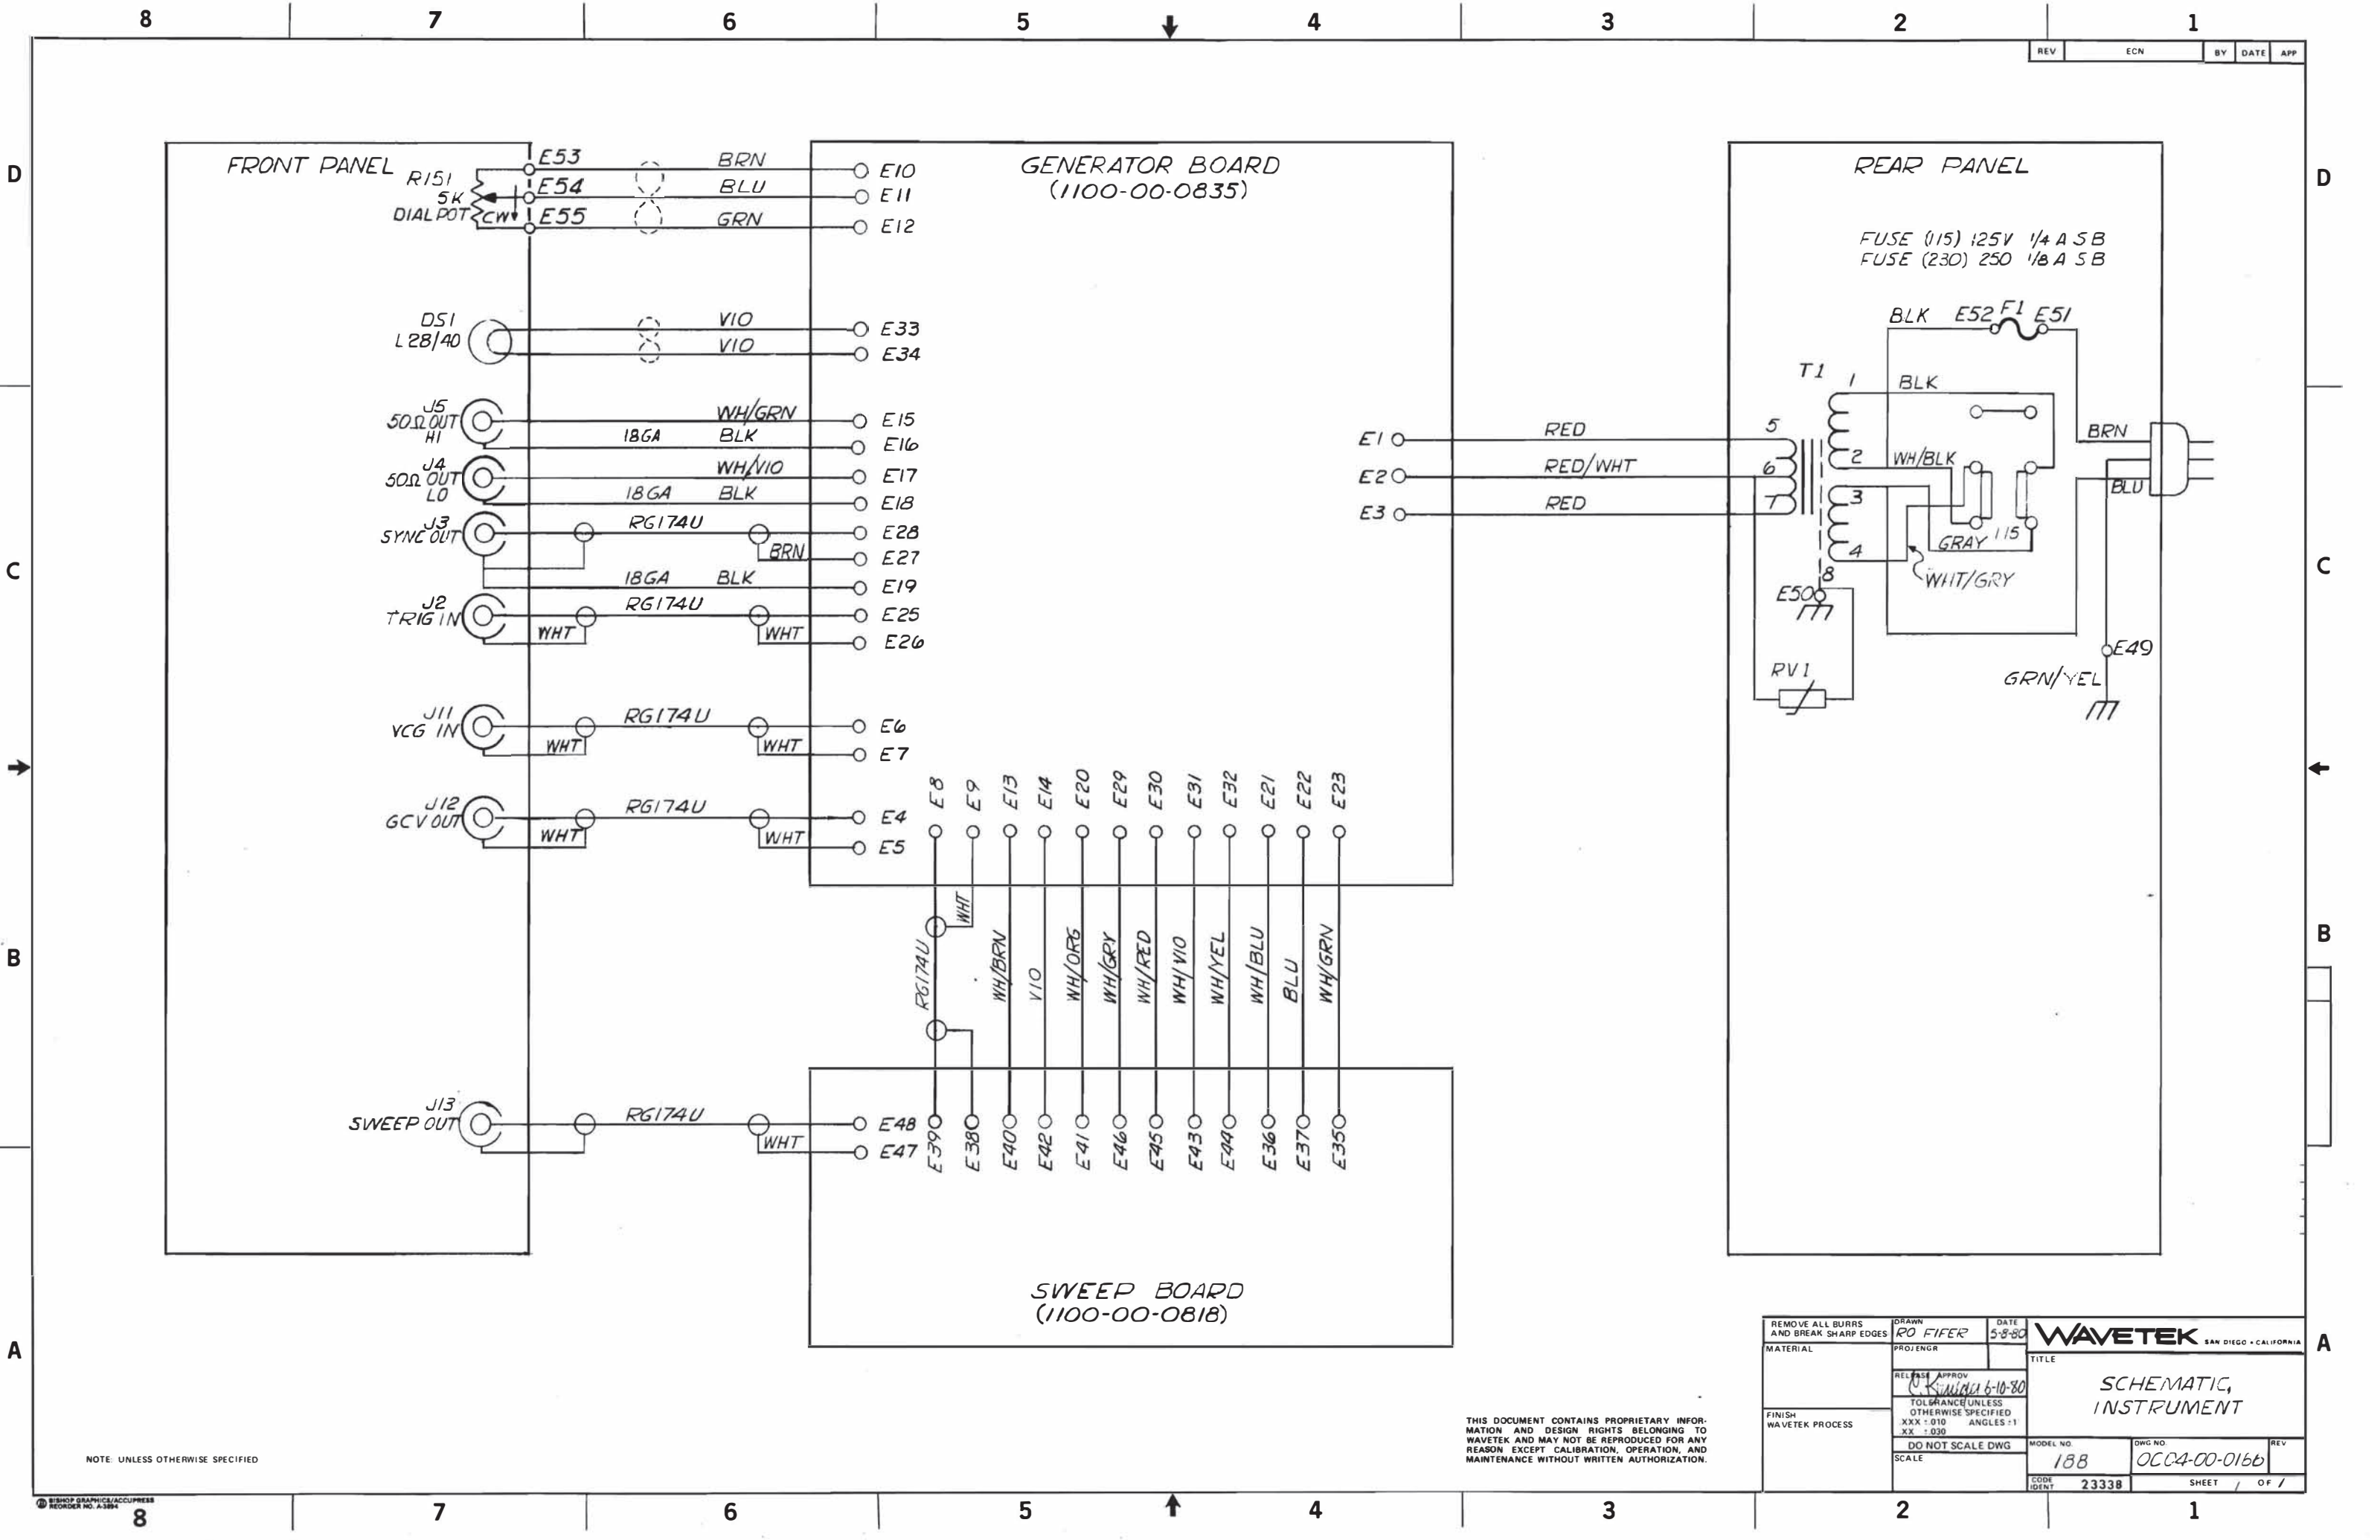

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REMOVE ALL BURRS AND BREAK SHARP EDGES		DRAWN RO FIFER	DATE 5-8-80	WAVETEK SAN DIEGO • CALIFORNIA	
MATERIAL		PROJ ENGR		TITLE SCHEMATIC, INSTRUMENT	
FINISH WAVETEK PROCESS		RELEASE APPROV K. K. 6-10-80		TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES ±1 XX - 030	
DO NOT SCALE DWG		SCALE		MODEL NO. 188	DWG NO. OCC4-00-0166
CODE IDENT 23338		SHEET 1 OF 1		REV	

A



CODE IDENT	23338	SHEET /	OF /
------------	-------	---------	------

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	ASSY DRWG, CHASSIS	0102-00-0837	WVTK	0102-00-0837	1
1	DIAL ASSY	188-0029	WVTK	1201-00-0029	1
2	TRANSFORMER	182A-0041	WVTK	1204-00-0041	1
3	INSULATOR, MICA	142-311	WVTK	1400-00-2080	2
4	PLATE, NAME	139-305	WVTK	1400-00-2180	1
5	INDICATOR, DIAL	180-303	WVTK	1400-00-4970	1
6	COVER, TOP	180-300-1	WVTK	1400-00-5000	1
7	COVER, BOTTOM	180-300-2	WVTK	1400-00-5030	1
8	I.D. LABEL	1400-00-9110	WVTK	1400-00-9110	1
11	BRACKET, AC SHIELD	1400-00-9473	WVTK	1400-00-9473	1
9	FRONT PANEL	1400-01-1440	WVTK	1400-01-1440	1
10	REAR PANEL	1400-01-1843	WVTK	1400-01-1843	1
12	BNC CONN	KC-7946	KING	2100-01-0002	7
14	SOLDER LUG	1497	SMITH	2100-04-0012	7
13	SOLDER LUG	1485-6	SMITH	2100-04-0025	2
15	KNOB, SMALL	0-M-9	ROGAN	2400-01-0010	1
16	KNOB, 1/4" BUSHING	RB-67-0-M-9	ROGAN	2400-01-0017	3
18	FUSE, 125V, 1/4A, SB	313, 250	LITFU	2400-05-0008	1
WAVETEK PARTS LIST		TITLE CHASSIS	ASSEMBLY NO. 1101-00-0837		REV
			PAGE: 1		

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
19	FUSE HOLD	031.1653/031.1666	SCHUR	2400-05-0012	1
20	STANDOFF, MALE/FEMALE .750 H., .250 HEX, 4-40	1443-M03-F05-440	UNICP	2800-02-0009	2
21	BAIL ASSY w/FT	180-500	WVTK	2800-08-0010	1
22	SPEEDNUT, SELF RETAIN	C7494-632-4	TINN	2800-09-0003	6
23	STRAIN RELIEF BUSH	SR6W-1	MEYCO	2800-37-0003	1
27	VARISTOR	V562A8	GE	4799-00-0048	1
28	TRANS	TIP-30	TI	4902-00-0300	1
29	SWITCH ASSY SLIDE	46256-1F	SWCFT	5105-00-0002	1
24	PWR CORD	0-7789-008-GY	PACRD	6001-80-0004	1
25	VOLTAGE REGULATOR	MC7815	MDT	7000-78-1500	1
WAVETEK PARTS LIST		TITLE CHASSIS	ASSEMBLY NO. 1101-00-0837		REV
			PAGE: 2		

REMOVE ALL BURRS AND BREAK SHARP EDGES		DRAWN	DATE	WAVETEK SAN DIEGO • CALIFORNIA	
MATERIAL		PROJ ENGR		TITLE	
		RELEASE APPROV		PARTS LIST CHASSIS	
FINISH WAVETEK PROCESS		TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 ANGLES :1° XX .030			
		DO NOT SCALE DWG		MODEL NO	DWG NO
		SCALE		188	1101-00-0837
				CODE IDENT	23338
				SHEET	OF

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

D

C

B

A

5. ALL CAPACITORS ARE IN μF
4. ALL RESISTORS ARE IN OHMS
3. ALL DIODES ARE FDG6666
2. MATCHED PAIR P/N 4998-00-0009
1. MATCHED PAIR P/N 4789-00-0019
NOTE: UNLESS OTHERWISE SPECIFIED

8

8

7

6


5

4


3

2

1

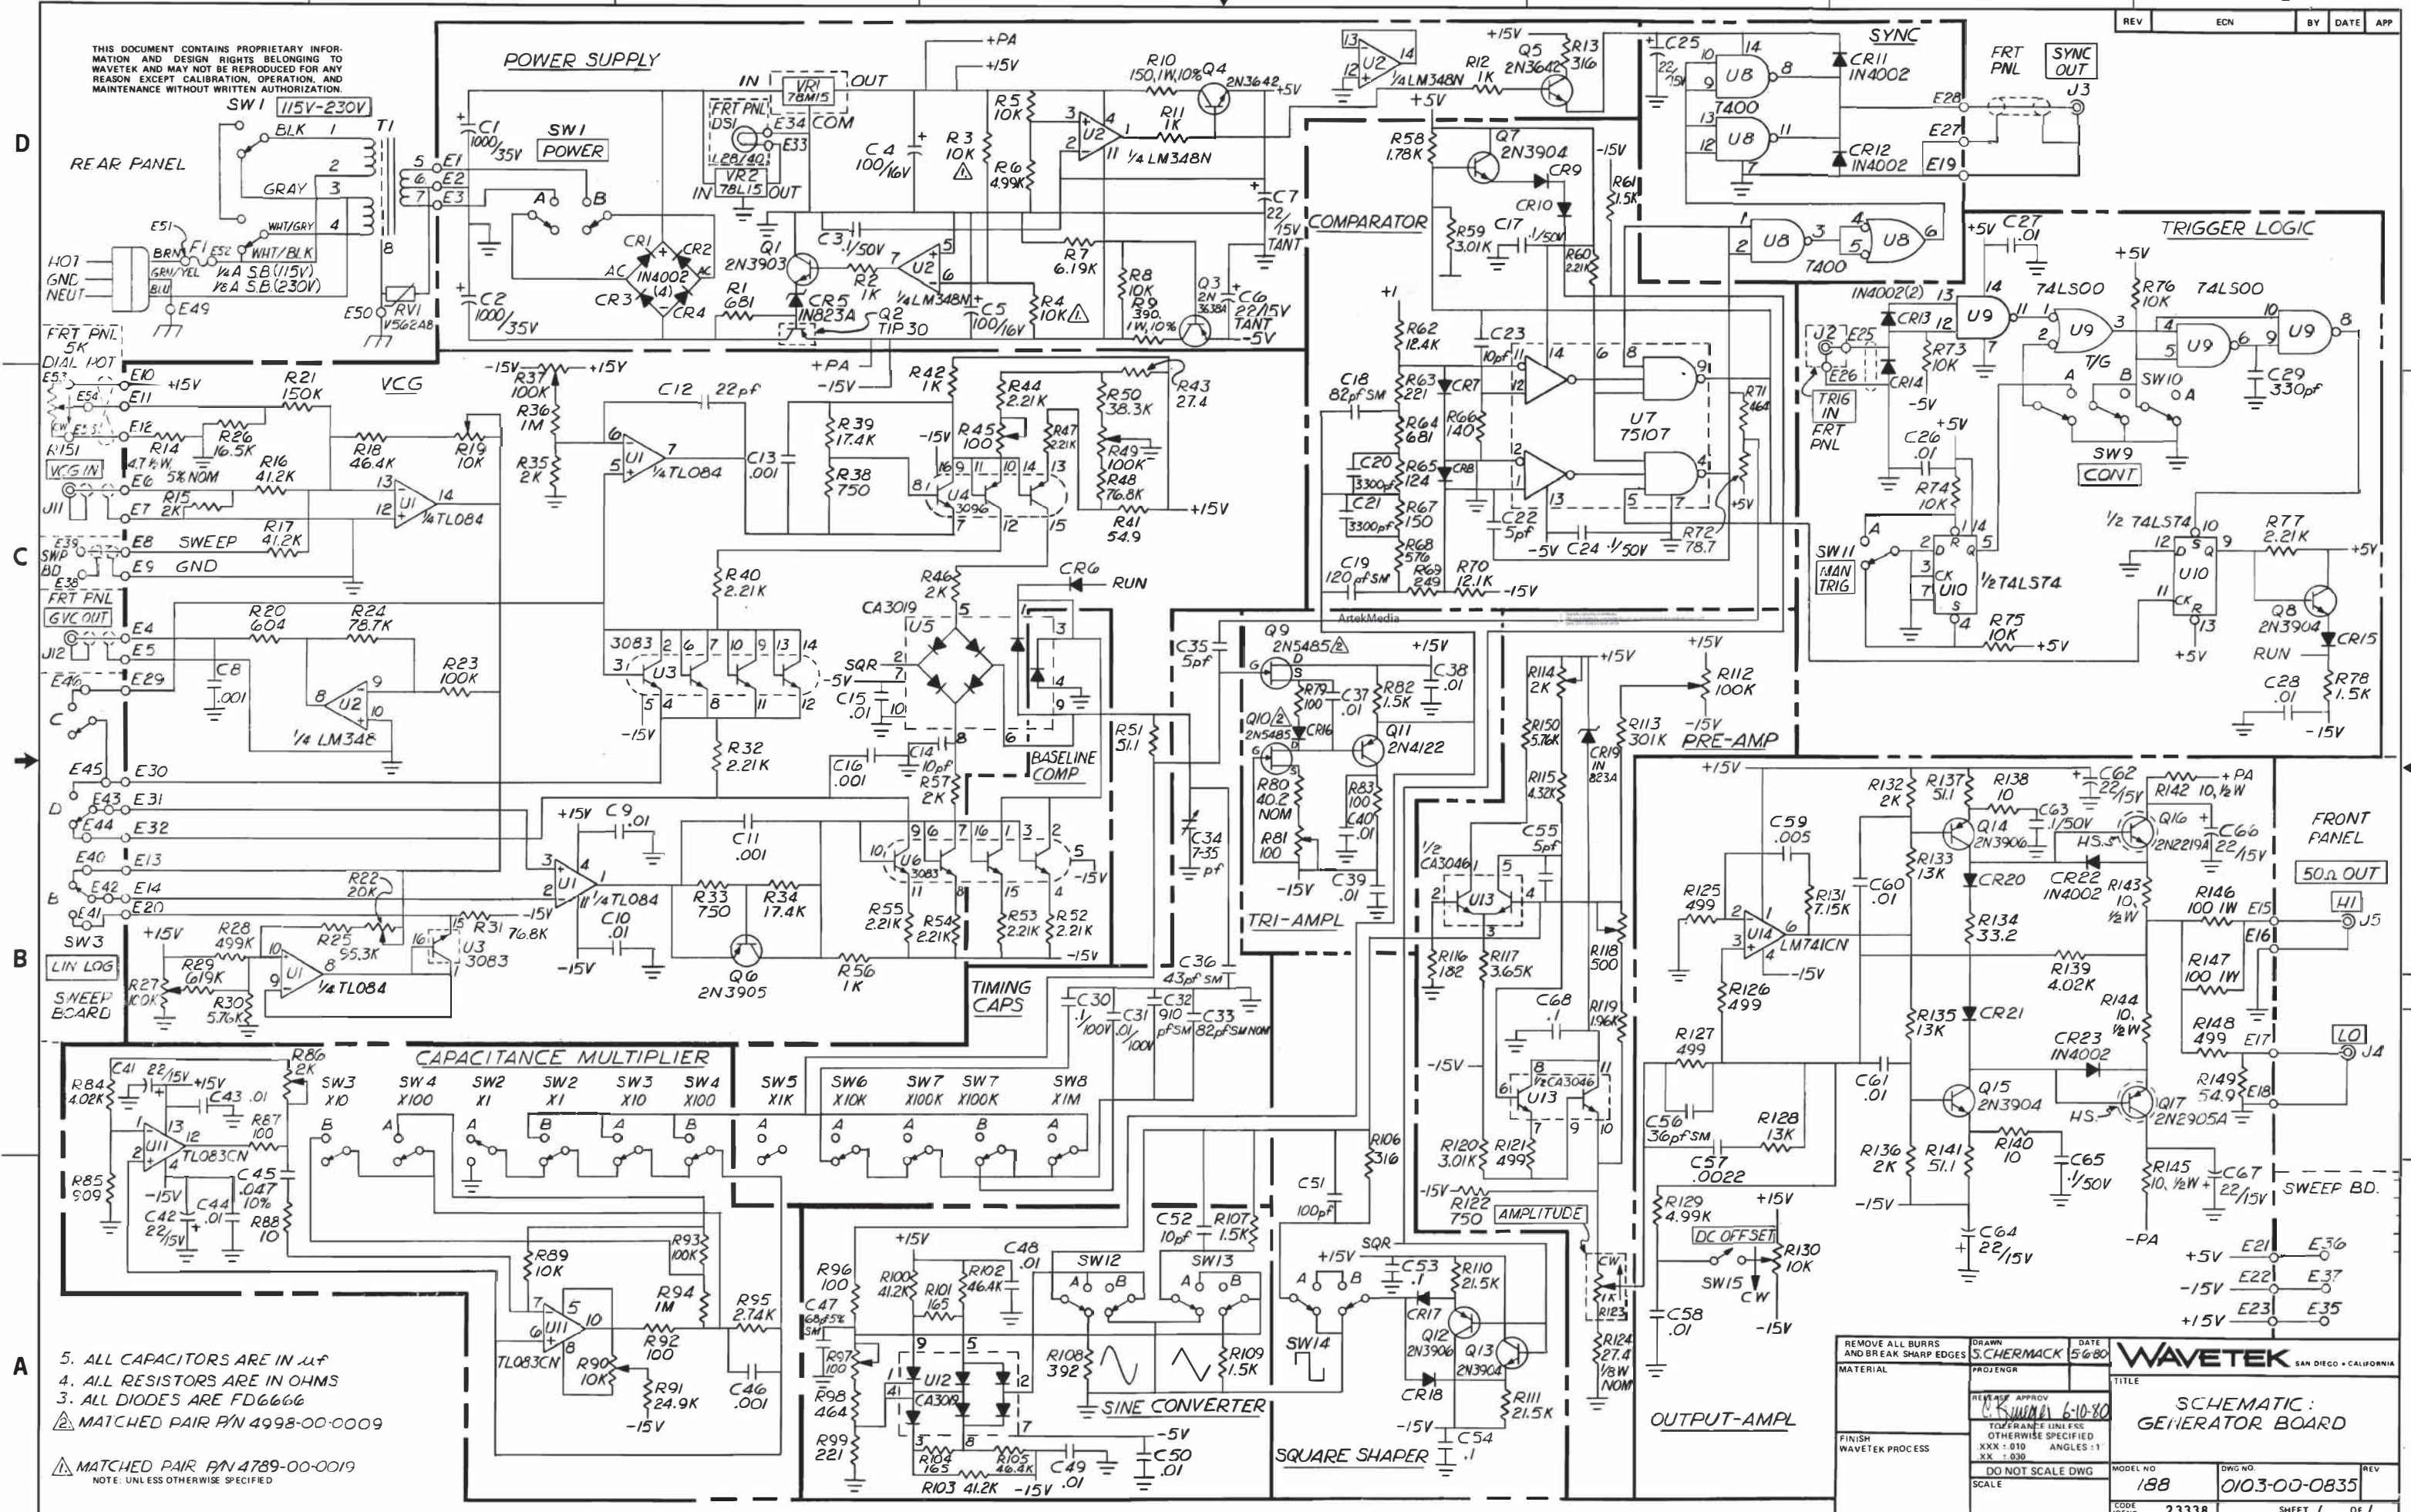

REMOVED ALL BURRS AND BREAK SHARP EDGES		DRAWN: S. SCHERMAK		DATE: 5-6-80	
MATERIAL:		PROJECTOR:		TITLE:	
FINISH: WAVETEK PROCESS		RELEASE APPROV: [Signature]		DATE: 6-10-80	
DO NOT SCALE DWG		TOLERANCE UNLESS OTHERWISE SPECIFIED		SCHEMATIC: GENERATOR BOARD	
SCALE:		XX: 0.10		ANGLES: 1°	
CODE IDENT: 23338		MODEL NO: 188		DNG NO: 0103-00-0835	
SHEET 1 OF 1		REV: 1		WAVETEK SAN DIEGO - CALIFORNIA	

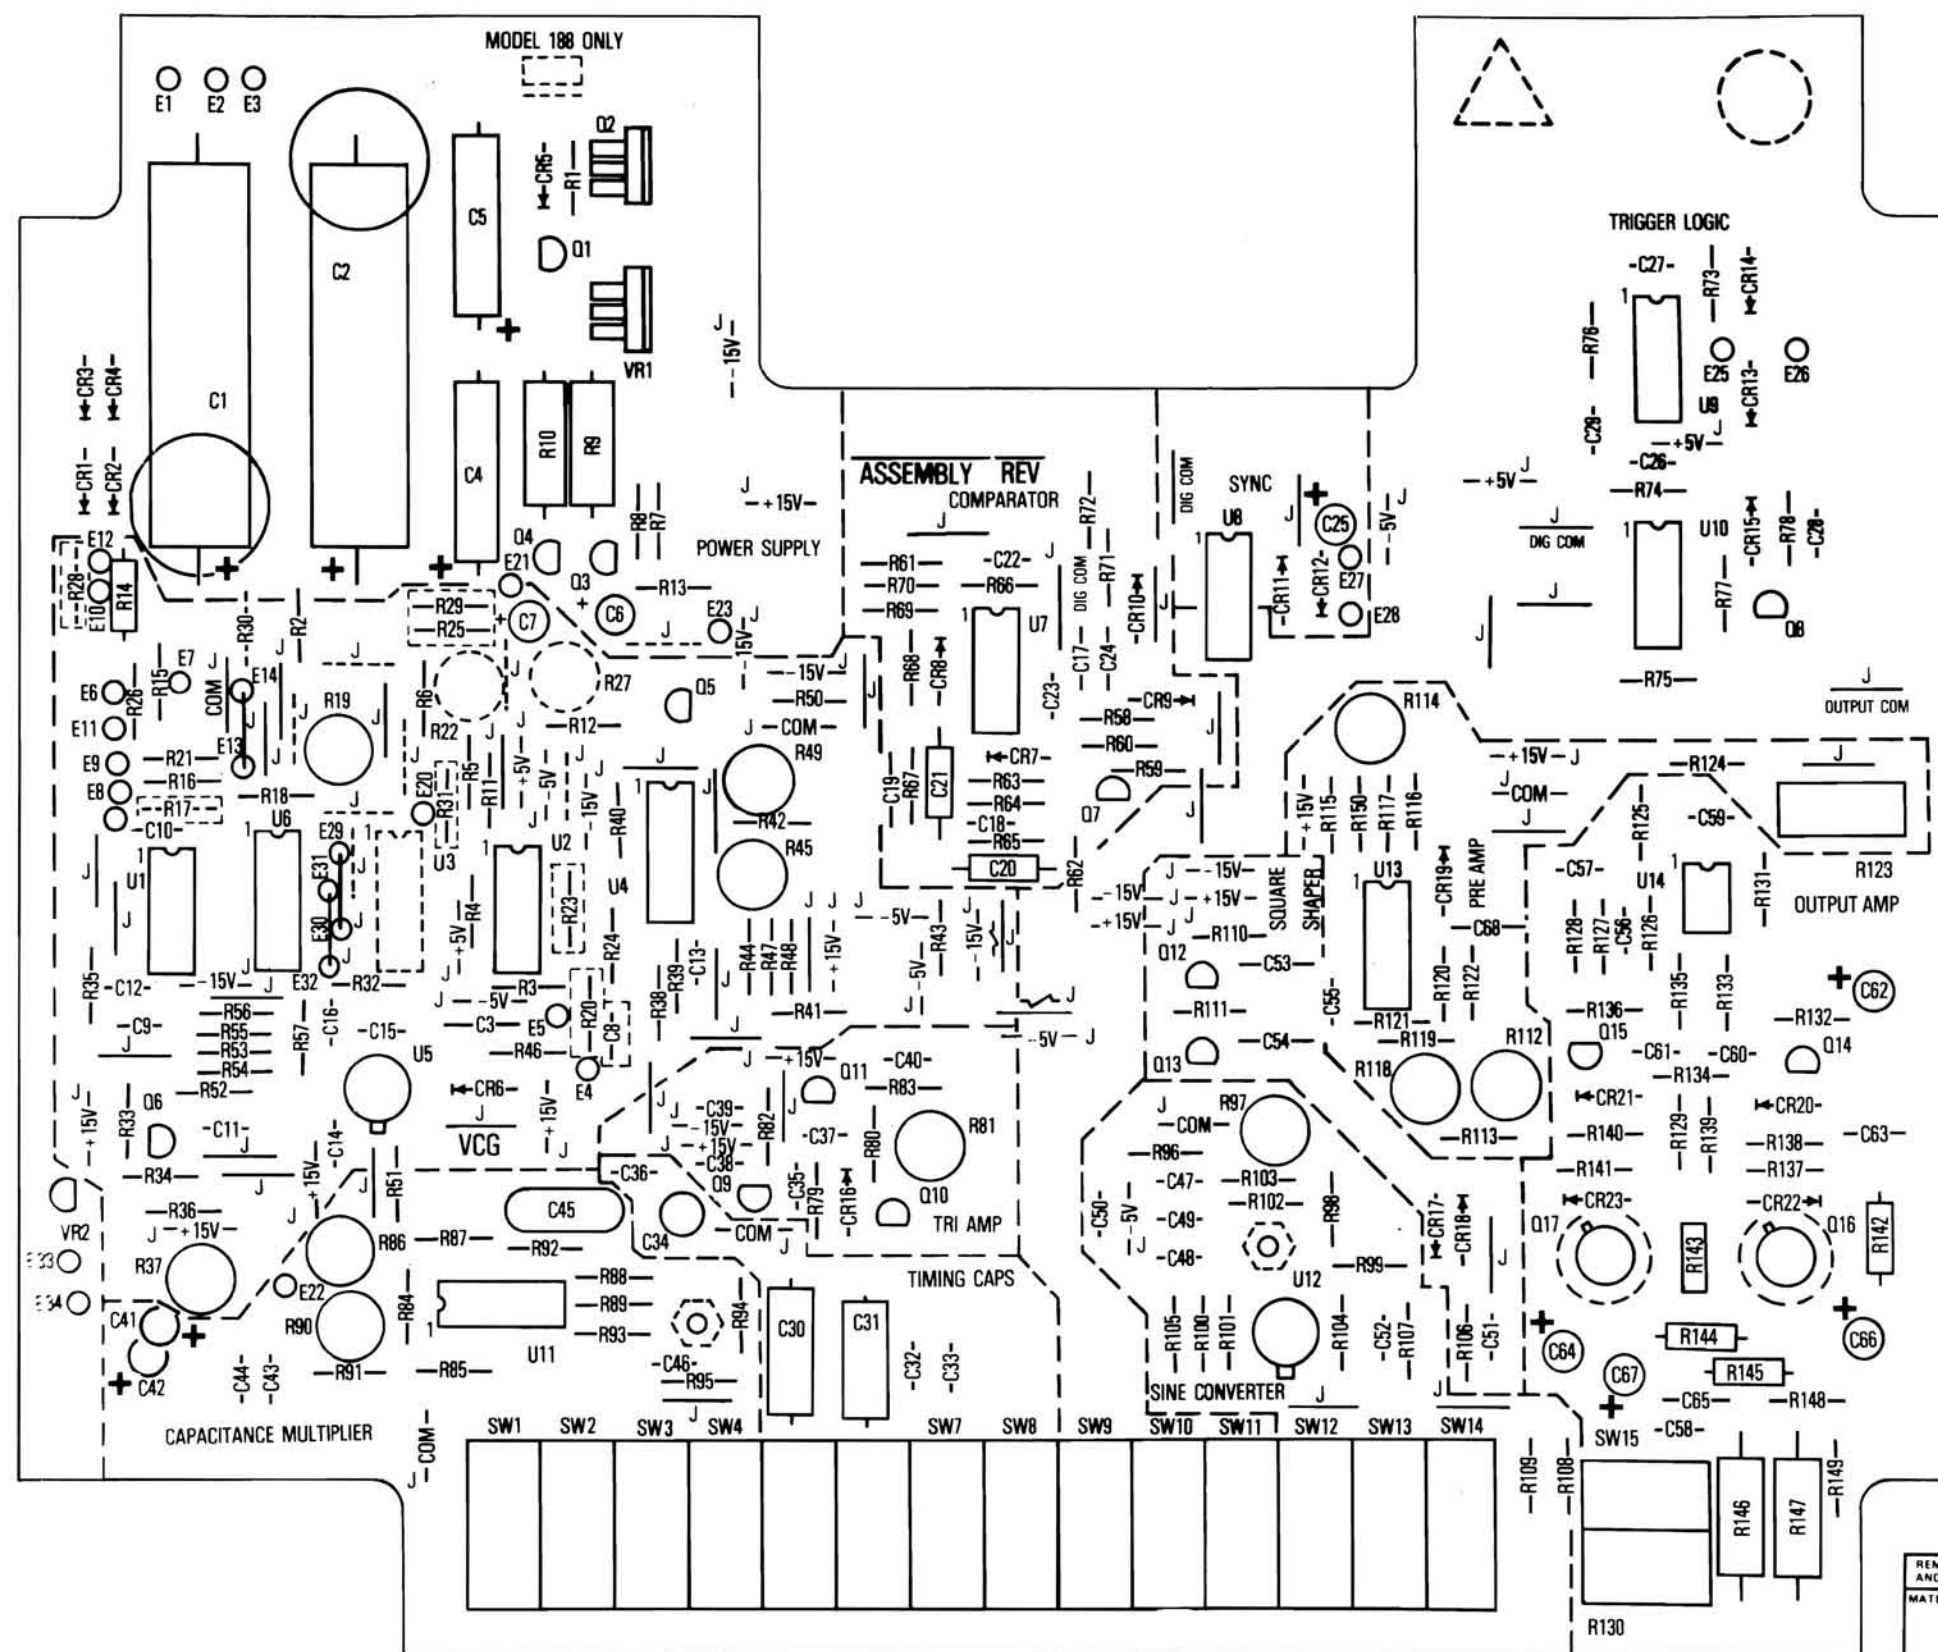

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO - CALIFORNIA	
	PROJ ENGR		TITLE	
FINISH WAVETEK PROCESS	RELEASE	APPROV	GENERATOR BOARD ASSEMBLY	
	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030		MODEL NO	DWG NO
	DO NOT SCALE DWG		188	1100-00-0835
	SCALE		CODE IDENT	SHEET 1 OF 1
			23338	

8		7		6		5		4		3		2		1																											
														REV	ECN	BY	DATE	APP																							
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.																																									
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG=MFG=PART-NO						MFG						WAVETEK NO.						QTY/PT											
NONE						ASSY DRWG, GEN BD						0101-00-0835						WVTK						0101-00-0835						1											
NONE						SCHEMATIC, GEN BD						0103-00-0835						WVTK						0103-00-0835						1											
C22 C35 C55						CAP, CER, 5PF, 1KV						DD-050						CRL						1500-00-5011						3											
C14 C23 C52						CAP, CER, 10PF, 1KV						DD-100						CRL						1500-01-0011						3											
C51						CAP, CER, 100PF, 1KV						DD-101						CRL						1500-01-0111						1											
C11 C13 C16 C46 C8						CAP, CER, .001MF, 1KV						DD-102						ARCO						1500-01-0211						5											
C10 C15 C26 C27 C28 C37 C38 C39 C40 C43 C44 C48 C49 C50 C58 C60 C61 C9						CAP, CER, .01MF, 50V						CK-103						CRL						1500-01-0310						18											
C17 C24 C3 C53 C54 C63 C65 C68						CAP, CER, MON, 1MF, 50V						180225U050A1042						VARDN						1500-01-0405						8											
C12						CAP, CER, 22PF, 1KV						DD-220						ARCO						1500-02-2011						1											
C57						CAP, CER, .0022, 1KV						DD-222 LONG LEAD						CRL						1500-02-2201						1											
C29						CAP, CER, 330PF, 1KV						DD-331						ARCO						1500-03-3111						1											
C20 C21						CAP, C, MN, 3300PF, 50V						1801X7R050A332J						VRDYN						1500-03-3205						2											
C59						CAP, CER, .005MF, 50V						CK-502						CRL						1500-05-0210						1											
C19						CAP, MICA, 120PF, 500V						DM15-121J						ARCO						1500-11-2100						1											
C56						CAP, MICA, 36PF, 500V						DM15-360J						ARCO						1500-13-6000						1											
C36						CAP, MICA, 43PF, 500V						DM15-430J						ARCO						1500-14-3000						1											
WAVETEK PARTS LIST						TITLE PCA, GENERATOR BD						ASSEMBLY NO. 1100-00-0835						REV B						PAGE: 1																	
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG=MFG=PART-NO						MFG						WAVETEK NO.						QTY/PT											
R19 R90						POT, TRIM, 10K						91AR10K						BECK						4600-01-0315						2											
R112 R27 R37 R49						POT, TRIM, 100K						91AR100K						BECK						4600-01-0402						4											
R114 R86						POT, TRIM, 2K						91AR2K						BECK						4600-02-0201						2											
R22						POT, TRIM, 20K						91AR20K						BECK						4600-02-0301						1											
R118						POT, TRIM, 500						91AR500						BECK						4600-05-0104						1											
R130						POT, SWITCH, 10K						GH-1879						CTS						4602-01-0300						1											
R123						POT, CONT, 1K FROM: 4600-01-0207						4609-71-0201						WVTK						4609-71-0201						1											
R142 R143 R144 R145						RES, C, 1/2W, 5%, 10						RC20GF-100						STKPL						4700-25-0100						4											
R14						RES, C, 1/2W, 5%, 4.7						RC20GF-4R7						STKPL						4700-25-0479						1											
R10						RES, C, 1K, 10%, 150						RC32GF151K						AB						4700-36-1500						1											
R9						RES, C, 1K, 10%, 390						RC32GF391K						AB						4700-36-3900						1											
R79 R83 R87 R92 R96						RES, MF, 1/8W, 1%, 100						RN55D-1000F						TRW						4701-03-1000						5											
R11 R12 R2 R42 R56						RES, MF, 1/8W, 1%, 1K						RN55D-1001F						TRW						4701-03-1001						5											
R5 R73 R74 R75 R76 R8 R89						RES, MF, 1/8W, 1%, 10K						RN55D-1002F						TRW						4701-03-1002						7											
R23 R93						RES, MF, 1/8W, 1%, 100K						RN55D-1003F						TRW						4701-03-1003						2											
R138 R140 R88						RES, MF, 1/8W, 1%, 10						RN55D-10R0F						TRW						4701-03-1009						3											
WAVETEK PARTS LIST						TITLE PCA, GENERATOR BD						ASSEMBLY NO. 1100-00-0835						REV B						PAGE: 3																	
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG=MFG=PART-NO						MFG						WAVETEK NO.						QTY/PT											
R32 R40 R44 R47 R52 R53 R54 R55 R60 R77						RES, MF, 1/8W, 1%, 2.21K						RN55D-2211F						TRW						4701-03-2211						10											
R69						RES, MF, 1/8W, 1%, 249						RN55D-2490F						TRW						4701-03-2490						1											
R91						RES, MF, 1/8W, 1%, 24.9K						RN55D-2492F						TRW						4701-03-2492						1											
R95						RES, MF, 1/8W, 1%, 2.74K						RN55D-2741F						TRW						4701-03-2741						1											
R124 R43						RES, MF, 1/8W, 1%, 27.4						RN55D-2744F						TRW						4701-03-2749						2											
R120 R59						RES, MF, 1/8W, 1%, 3.01K						RN55D-3011F						TRW						4701-03-3011						2											
R113						RES, MF, 1/8W, 1%, 301K						RN55D-3013F						TRW						4701-03-3013						1											
R106 R13						RES, MF, 1/8W, 1%, 316						RN55D-3160F						TRW						4701-03-3160						2											
R134						RES, MF, 1/8W, 1%, 33.2						RN55D-332F						TRW						4701-03-3329						1											
R117						RES, MF, 1/8W, 1%, 3.65K						RN55D-3651F						TRW						4701-03-3651						1											
R50						RES, MF, 1/8W, 1%, 38.3K						RN55D-3832F						TRW						4701-03-3832						1											
R108						RES, MF, 1/8W, 1%, 392						RN55D-3920F						TRW						4701-03-3920						1											
R139 R84						RES, MF, 1/8W, 1%, 4.02K						RN55D-4021F						TRW						4701-03-4021						2											
R80						RES, MF, 1/8W, 1%, 40.2						RN55D-402F						TRW						4701-03-4029						1											
R100 R103 R16 R17						RES, MF, 1/8W, 1%, 41.2K						RN55D-4122F						TRW						4701-03-4122						4											
R115						RES, MF, 1/8W, 1%, 4.32K						RN55D-4321F						TRW						4701-03-4321						1											
R71 R98						RES, MF, 1/8W, 1%, 464						RN55D-4640F						TRW						4701-03-4640						2											
WAVETEK PARTS LIST						TITLE PCA, GENERATOR BD						ASSEMBLY NO. 1100-00-0835						REV B						PAGE: 5																	
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG=MFG=PART-NO						MFG						WAVETEK NO.						QTY/PT											
C47						CAP, MICA, 68PF, 500V						DM15-680J						ARCO						1500-16-8000						1											
C18 C33						CAP, MICA, 82PF, 500V						DM15-820J						ARCO						1500-18-2000						2											
C32						CAP, 910PF, 100V, 1%						DM15-911F						ARCO						1500-19-1101						1											
C4 C5						CAP, ELEC						500D107G016DC7						SPRAG						1500-31-0101						2											
C1 C2						CAP, ELECT, 1000MF, 35V						39D108G035GL6						SPRAG						1500-31-0212						2											
C31						CAP, POLYC, .01MF, 100V						PA28103F						ELCUB						1500-41-0304						1											
C30						CAP, POLYC, .1MF, 100V						PA28104F						ELCUB						1500-41-0404						1											
C45						CAP, MYLAR, .047MF100V						225P47391WD3						SPRAG						1500-44-7314						1											
C34						VARI, 7-35PF, 250V						7S-TRIKO-02 7/35 PF						TRIKO						1500-53-5000						1											
C25 C41 C42 C6 C62 C64 C66 C67 C7						CAP, TANT, 22MF, 15V						196D226X9015KA1						SPRAG						1500-72-2601						9											
1						GENERATOR BD						1700-00-0817						WVTK						1700-00-0817						1											
DS1						LAMP						L28/40						MURA						2400-02-0017						1											
NONE						STANDOFF, SWAGE .875 H, .250 HEX 4-40, .062 MAT'L						6926-7/8-2C						LYNTR						2800-05-0003						2											
NONE						HEAT SINK						NF-207						WAKE						2800-11-0001						2											
NONE						TRANSIPAD						10160						METRS						2800-11-0004						2											
R45 R81 R97						POT, TRIM, 100						91AR100						BECK						4600-01-0103						3											
WAVETEK PARTS LIST						TITLE PCA, GENERATOR BD						ASSEMBLY NO. 1100-00-0835						REV B						PAGE: 2																	
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG=MFG=PART-NO						MFG						WAVETEK NO.						QTY/PT											
R70						RES, MF, 1/8W, 1%, 12.1K						RN55D-1212F						TRW						4701-03-1212						1											
R65						RES, MF, 1/8W, 1%, 124						RN55D-1240F						TRW						4701-03-1240						1											
R62						RES, MF, 1/8W, 1%, 12.4K						RN55D-1242F						TRW						4701-03-1242						1											
R120 R11, 3% R135						RES, MF, 1/8W, 1%, 13K						RN55D-1302F						TRW						4701-03-1302						3											
R66						RES, MF, 1/8W, 1%, 140						RN55D-1400F						TRW						4701-03-1400						1											
R67						RES, MF, 1/8W, 1%, 150						RN55D-1500F						TRW						4701-03-1500						1											
R107 R109 R61 R78 R82						RES, MF, 1/8W, 1%, 1.5K						RN55D-1501F						TRW						4701-03-1501						5											
R21						RES, MF, 1/8W, 1%, 150K						RN55D-1503F						TRW						4701-03-1503						1											
R101 R104						RES, MF, 1/8W, 1%, 165						RN55D-1650F						TRW						4701-03-1650						2											
R26						RES, MF, 1/8W, 1%, 16.5K						RN55D-1652F						TRW						4701-03-1652						1											
R34 R39						RES, MF, 1/8W, 1%, 17.4						RN55D-1742F						TRW						4701-03-1742						2											
R58						RES, MF, 1/8W, 1%, 1.78K						RN55D-1781F						TRW						4701-03-1781						1											
R116						RES, MF, 1/8W, 1%, 182						RN55D-1820F						TRW						4701-03-1820						1											
R119						RES, MF, 1/8W, 1%, 1.96K						RN55D-1961F						TRW						4701-03-1961						1											
R132 R136 R15 R35 R46 R57						RES, MF, 1/8W, 1%, 2K						RN55D-2001F						TRW						4701-03-2001						6											
R110 R111						RES, MF, 1/8W, 1%, 21.5K						RN55D-2152F						TRW						4701-03-2152						2											
R63 R99						RES, MF, 1/8W, 1%, 221						RN55D-2210F						TRW						4701-03-2210						2											
WAVETEK PARTS LIST						TITLE PCA, GENERATOR BD						ASSEMBLY NO. 1100-00-0835						REV B						PAGE: 4																	
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG=MFG=PART-NO						MFG						WAVETEK NO.						QTY/PT											
R102 R105 R18						RES, MF, 1/8W, 1%, 46.4K						RN55D-4642F						TRW						4701-03-4642						3											
R121 R125 R126 R127 R148						RES, MF, 1/8, 1%, 499						RN55D-4990F						TRW						4701-03-4990						5											
R129 R6						RES, MF, 1/8W, 1%, 4.99K						RN55D-4991F						TRW						4701-03-4991						2											
R137 R141 R51						RES, MF, 1/8W, 1%, 51.1						RN55D-51R1F						TRW						4701-03-5119						3											
R149 R41						RES, MF, 1/8W, 1%, 54.9						RN55D-54R9F						TRW						4701-03-5499						2											
R68						RES, MF, 1/8W, 1%, 576						RN55D-5760F						TRW						4701-03-5760						1											
R150 R30						RES, MF, 1/8W, 1%, 5.76K						RN55D-5761F						TRW						4701-03-5761						2											
R20						RES, MF, 1/8W, 1%, 604						RN55D-6040F						TRW						4701-03-6040						1											
R7						RES, MF, 1/8W, 1%, 6.19K						RN55D-6191F						TRW						4701-03-6191						1											
R1 R64						RES, MF, 1/8W, 1%, 681						RN55D-6810F						TRW						4701-03-6810						2											
R131						RES, MF, 1/8W, 1%, 7.15K						RN55D-7151F						TRW						4701-03-7151						1											
R122 R33 R38						RES, MF, 1/8W, 1%, 750						RN55D-7500F						TRW						4701-03-7500						3											
R31 R48						RES, MF, 1/8W, 1%, 76.8K						RN55D-7682F						TRW						4701-03-7682						2											
R24						RES, MF, 1/8W, 1%, 78.7K						RN55D-7872F						TRW						4701-03-7872						1											
R72						RES, MF, 1/8W, 1%, 78.7						RN55D-7887F						TRW						4701-03-7879						1											
R85						RES, MF, 1/8W, 1%, 909						RN55D-9090F						TRW						4701-03-9090						1											
R25						RES, MF, 1/8W, 1%, 95.3K						RN55D-9532F						TRW						4701-03-9532						1											
WAVETEK PARTS LIST						TITLE PCA, GENERATOR BD						ASSEMBLY NO. 1100-00-0835						REV B						PAGE: 6																	
REMOVE ALL BURRS AND BREAK SHARP EDGES						DRAWN						DATE						WAVETEK SAN DIEGO • CALIFORNIA																							
MATERIAL						PROJ ENGR						TITLE PARTS LIST GENERATOR BD																													
						RELEASE						APPROV																													
						TOLERANCE UNLESS OTHERWISE SPECIFIED						ANGLES : 1°																													
FINISH WAVETEK PROCESS						XXX : .010						XX : .030						DO NOT SCALE DWG						MODEL NO 188						DWG NO. 1100-00-0835						REV B					
						SCALE																		CODE IDENT 23338						SHEET OF 2											
NOTE: UNLESS OTHERWISE SPECIFIED																																									
8		7		6		5		4		3		2		1																											


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R36 R94	RES,MF,1/4W,1%,1M	RN60D-1004F	TRW	4701-13-1004	2
R28	RES,MF,1/4W,1%,499K	RN60D-4993F	TRW	4701-13-4993	1
R29	RES,MF,1/4W,1%,619K	RN60D-6193F	TRW	4701-13-6193	1
R146 R147	RES,MF,1W,1%,100	RN70D-1000F	TRW	4701-33-1000	2
R3 R4	RES,SET,2-10K,1/8W QTY:214701-03-1002	142-501-64A	WVTK	4789-00-0019	1
CR19 CR5	DIODE,ZENER 6.2V	1N823A	NPC	4801-01-0823	2
CR1 CR11 CR12 CR13 CR14 CR2 CR22 CR23 CR3 CR4	DIODE	8CE-1	SEMT	4801-02-0001	10
CR10 CR15 CR16 CR17 CR18 CR20 CR21 CR6 CR7 CR8 CR9	DIODE	FD-6666	FAIR	4807-02-6666	11
Q16	TRANS	2N2219A	NSC	4901-02-2191	1
Q17	TRANS	2N2905A	NSC	4901-02-9051	1
Q3	TRANS	2N3638A	CARTR	4901-03-6381	1
Q4 Q5	TRANS	2N3642	FAIR	4901-03-6420	2
Q1	TRANS	2N3903	NSC	4901-03-9030	1
Q13 Q15 Q7 Q8	TRANS	2N3904	FAIR	4901-03-9040	4
Q6	TRANS	2N3905	ITT	4901-03-9050	1
WAVETEK PARTS LIST		TITLE PCA,GENERATOR 8D	ASSEMBLY NO. 1100-00-0835 PAGE: 7		REV B

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
Q12 Q14	TRANS	2N3906	FAIR	4901-03-9060	2
Q11	TRANS	2N4122	NSC	4901-04-1220	1
Q10 Q9	TRANS,M/PR,2N5485 QTY:214901-05-4850	142-501-53	WVTK	4998-00-0009	1
2	SWITCH ASSY PB	5103-00-0026	WVTK	5103-00-0026	1
U11	IC	TL083CN	TI	7000-00-8300	1
U1	IC	TL084CN	TI	7000-00-8400	1
U2	IC	LM348N	NSC	7000-03-4800	1
U14	IC	MA-741	FAIR	7000-07-4100	1
U12 U5	IC	CA-3019	FAIR	7000-30-1900	2
U13	IC	CA-3046	RCA	7000-30-4600	1
U3 U6	IC	CA3083	FAIR	7000-30-8300	2
U4	IC	CA-3096AE	RCA	7000-30-9600	1
VR2	IC	78L15	TI	7000-78-1501	1
U7	IC	SN75107AN	TI	7007-51-0700	1
U8	IC	7400	TI	8000-74-0000	1
U9	IC	74LS00	TI	8000-74-0010	1
U10	IC	74LS74	TI	8000-74-7410	1
WAVETEK PARTS LIST		TITLE PCA,GENERATOR 8D	ASSEMBLY NO. 1100-00-0835 PAGE: 8		REV B

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO • CALIFORNIA	
MATERIAL	PROJ ENGR		TITLE PARTS LIST GENERATOR BD	
	RELEASE	APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 .XX ±.030			
	DO NOT SCALE DWG		MODEL NO. 188	DWG NO. 1100-00-0835
	SCALE		REV B	
	CODE IDENT	23338	SHEET 2 OF 2	

NOTE: UNLESS OTHERWISE SPECIFIED

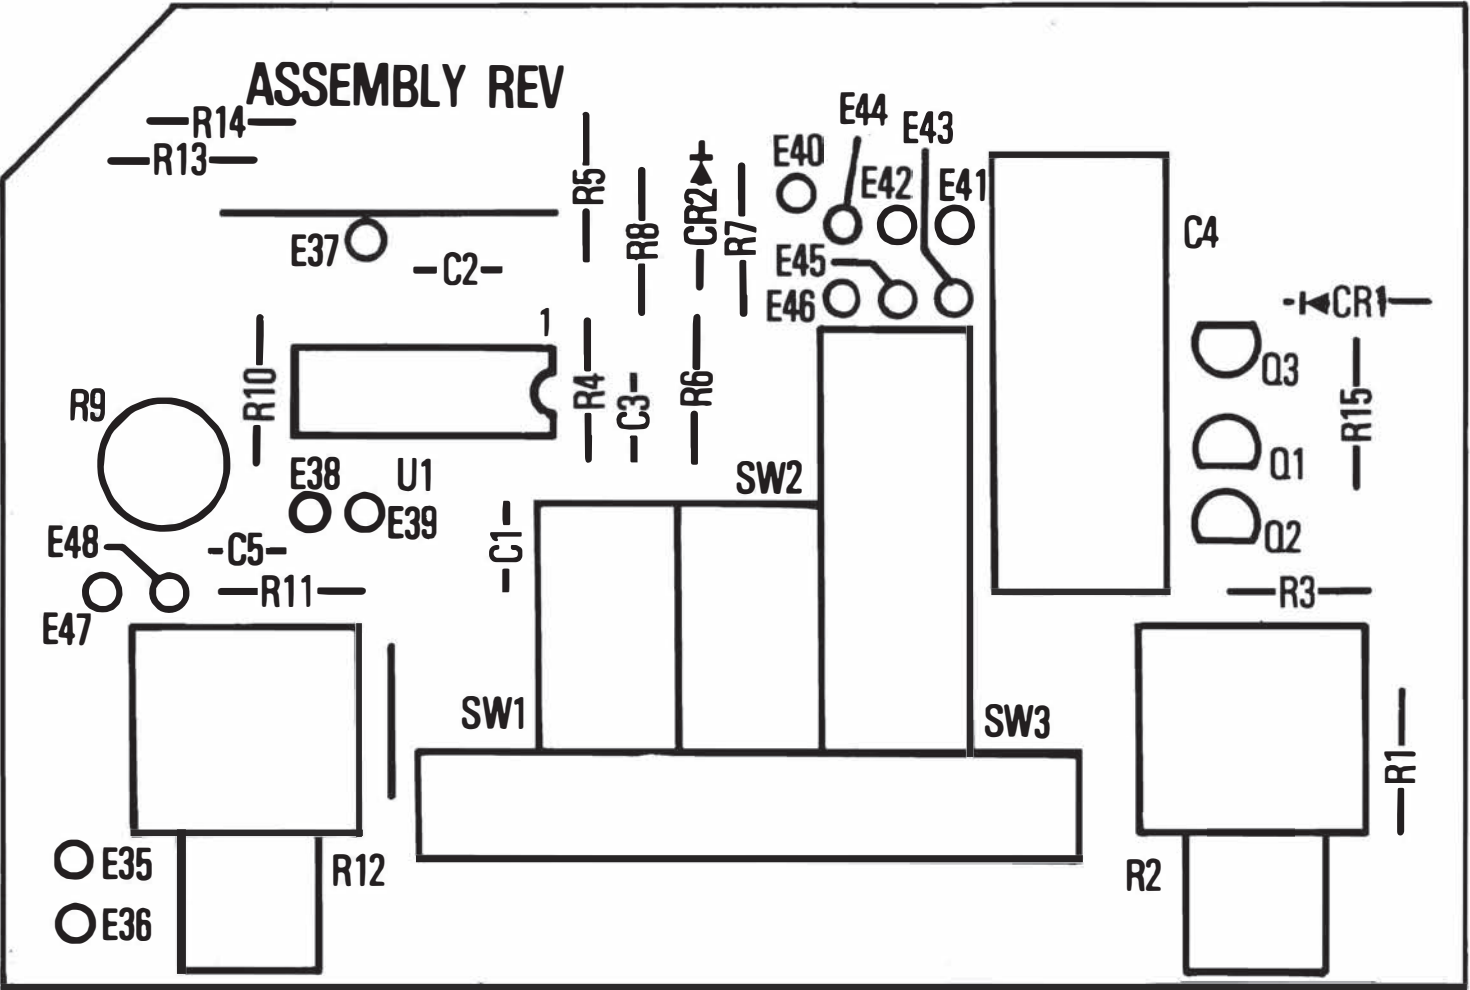

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO • CALIFORNIA
MATERIAL	PROJ ENGR		
FINISH WAVETEK PROCESS	RELEASE APPROV		TITLE SWEEP BOARD ASSEMBLY
	TOLERANCE UNLESS OTHERWISE SPECIFIED		MODEL NO. 138
	DO NOT SCALE DWG		DWG NO. 1100-00-0818
SCALE	CODE IDENT 23338		REV SHEET 1 OF 1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	ASSY DRWG,SWEEP BD	0101-00-0818	WVTK	0101-00-0818	1
NONE	SCHEMATIC,SWEEP BD	0103-00-0818	WVTK	0103-00-0818	1
C3 C5	CAP,CER,,.001MF,1KV	DD-102	ARCO	1500-01-0211	2
C1 C2	CAP,CER,,.01MF,50V	CK-103	CRL	1500-01-0310	2
C4	CAP,MYLR,2MF,200V	2MFM205K	AMRAD	1500-42-0504	1
NONE	SWEEP BD	1700-00-0818	WVTK	1700-00-0818	1
R12 R2	POT,CONT,10K	72MIN056S103U	AB	4600-01-0322	2
R9	POT,TRIM,20K	91AR20K	BECK	4600-02-0301	1
R15 R3	RES,MF,1/8W,1%,10K	RN55D-1002F	TRW	4701-03-1002	2
R6	RES,MF,1/8W,1%,100K	RN55D-1003F	TRW	4701-03-1003	1
R5	RES,MF,1/8W,1%,33,2K	RN55D-3322F	TRW	4701-03-3322	1
R10 R7	RES,MF,1/8W,1%,4,99K	RN55D-4991F	TRW	4701-03-4991	2
R14 R8	RES,MF,1/8W,1%,49,9K	RN55D-4992F	TRW	4701-03-4992	2
R11	RES,MF,1/8W,1%,604	RN55D-6040F	TRW	4701-03-6040	1
R4	RES,MF,1/8W,1%,90,9K	RN55D-9092F	TRW	4701-03-9092	1
R1	RES,MF,1/4W,1%,402K	RN60D-4023F	TRW	4701-13-4023	1
R13	RES,MF,1/4W,1%,499K	RN60D-4993F	TRW	4701-13-4993	1
CR1 CR2	DIODE	FD-6666	FAIR	4807-02-6666	2
TITLE PCA,SWEEP RD		ASSEMBLY NO. 1100-00-0818 PAGE: 1			REV B

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
Q3	TRANS	2N3903	NSC	4901-03-9030	1
Q1 Q2	TRANS,W/PR,2N3905 QTY:214901-03-9050	4996-00-0049	WVTK	4996-00-0049	1
NONE	SWITCH ASSY PB	5103-00-0030	WVTK	5103-00-0030	1
U1	IC	TL083CN	TI	7000-00-8300	1

WAVETEK PARTS LIST	TITLE PCA,SWEEP BD	ASSEMBLY NO. 1100-00-0818	REV B
	PAGE: 2		

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO • CALIFORNIA	
MATERIAL	PROJENGR		TITLE PARTS LIST SWEEP BOARD	
	RELEASE	APPROV		
FINISH	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES:1° .XX ±.030			
WAVETEK PROCESS	DO NOT SCALE DWG		MODEL NO. 188	DWG NO. 1100-00-0818
	SCALE		REV B	
			CODE IDENT 23338	SHEET 1 OF 1

NOTE: UNLESS OTHERWISE SPECIFIED

WAVETEK®
SAN DIEGO

9045 Balboa Ave., San Diego, CA 92123
P. O. Box 651, San Diego, Calif. 92112
Tel 714/279-2200 TWX 910-335-2007

Scans by ArtekMedia => 2011